

# Model 3130

---

*Downflow*

*Upflow*

---



**IMPORTANT:** Fill in pertinent information on page 2 for future reference.

# MODEL 3130

---

## Job Specification Sheet

---

- JOB NO. \_\_\_\_\_
- \*MODEL NO. \_\_\_\_\_
- WATER TEST \_\_\_\_\_
- CAPACITY PER UNIT \_\_\_\_\_
- MINERAL TANK SIZE DIA. \_\_\_\_\_ HEIGHT \_\_\_\_\_
- BRINE TANK SIZE & SALT SETTING PER REGENERATION: \_\_\_\_\_

### \* CONTROL VALVE SPECIFICATIONS

#### 1) Type of Timer (see pages 26-30)

- A) 7 day or 12 day
- B) \* 1,250 to 21,250 gallon meter or  
\* 6,250 to 106,250 gallon meter or  
\* Other \_\_\_\_\_

#### C) Meter Wiring Package

- 1) System #4 - 1 tank; 1 meter; immediate or delayed regeneration
- 2) System #5 - 2 tanks; 2 meters; interlock
- 3) System #6 - 2 tanks; 1 meter; series regeneration
- 4) System #7 - 2 tanks; 1 meter; alternator

#### 2) Timer Program Settings

- A) Backwash \_\_\_\_\_ min.
- B) Brine & Slow Rinse \_\_\_\_\_ min.
- C) Rapid Rinse \_\_\_\_\_ min.
- D) Brine Tank Refill \_\_\_\_\_ min.

#### 3) Drain Line Flow Controller \_\_\_\_\_ gpm

#### 4) Brine Line Flow Controller \_\_\_\_\_ gpm

#### 5) Injector Size # \_\_\_\_\_

- 6) A) Hard Water By-Pass
- B) No Hard Water By-Pass

# MODEL 3130

---

## *General Commercial Pre-Installation Check List*

---

**WATER PRESSURE:** A minimum of 25 pounds of water pressure is required for regeneration valve to operate effectively.

**ELECTRICAL FACILITIES:** A continuous 115 volt, 60 Hertz current supply is required. (Other voltages available.) Make certain the current supply is always hot and cannot be turned off with another switch.

**EXISTING PLUMBING:** Condition of existing plumbing should be free from lime and iron buildup. Piping that is built up heavily with lime and/or iron should be replaced. If piping is clogged with iron, a separate iron filter unit should be installed ahead of the water softener.

**LOCATION OF SOFTENER AND DRAIN:** The softener should be located close to a drain.

**BY-PASS VALVES:** Always provide for the installation of isolation and by-pass valves.


**CAUTION:** Water pressure is not to exceed 120 p.s.i., water temperature is not to exceed 100°F, and the unit cannot be subjected to freezing conditions.

### INSTALLATION INSTRUCTIONS

1. Place the softener tank where you want to install the unit making sure the unit is level and on a firm base. (Maximum 7 feet apart for twin units.)
2. All plumbing should be done in accordance with local plumbing codes. The pipe size for the drain line should be the same size or larger than the drain line flow control connection. Water meters are to be installed on soft water outlets. Twin units with (1) one meter shall be installed on common soft water outlet of units. If possible, minimize height of drain line above valve.
3. Make sure that the floor is clean beneath the salt storage tank and that it is level.
4. Place approximately 1" of water above the grid plate (if used) in your salt tank Salt may be placed in the unit at this time.
5. Close softener isolation valves and open the bypass valve. Turn on the main water supply. Open a cold soft water tap nearby and let run a few minutes or until the system is free from foreign material (usually solder) that may have resulted from the installation.
6. Open the softener inlet valves and close the bypass valve.
7. Manually index the softener control into "service" position and let water flow into the mineral tank. When water flow stops, close inlet valve, place control in "backwash" position to relieve head of air, then gradually open inlet valve to purge remaining air in tank. Return control to "service" position.
8. Electrical: All electrical connections must be connected according to codes. Use electrical conduit if applicable. Remote meter systems and twin meter system wiring diagrams are on pages 33-38.
9. Teflon tape is the only sealant to be used on the drain fitting. The drain from twin units may be run through a common line.
10. Plug into power supply.

# MODEL 3130 Downflow


## Water Conditioner Flow Diagrams

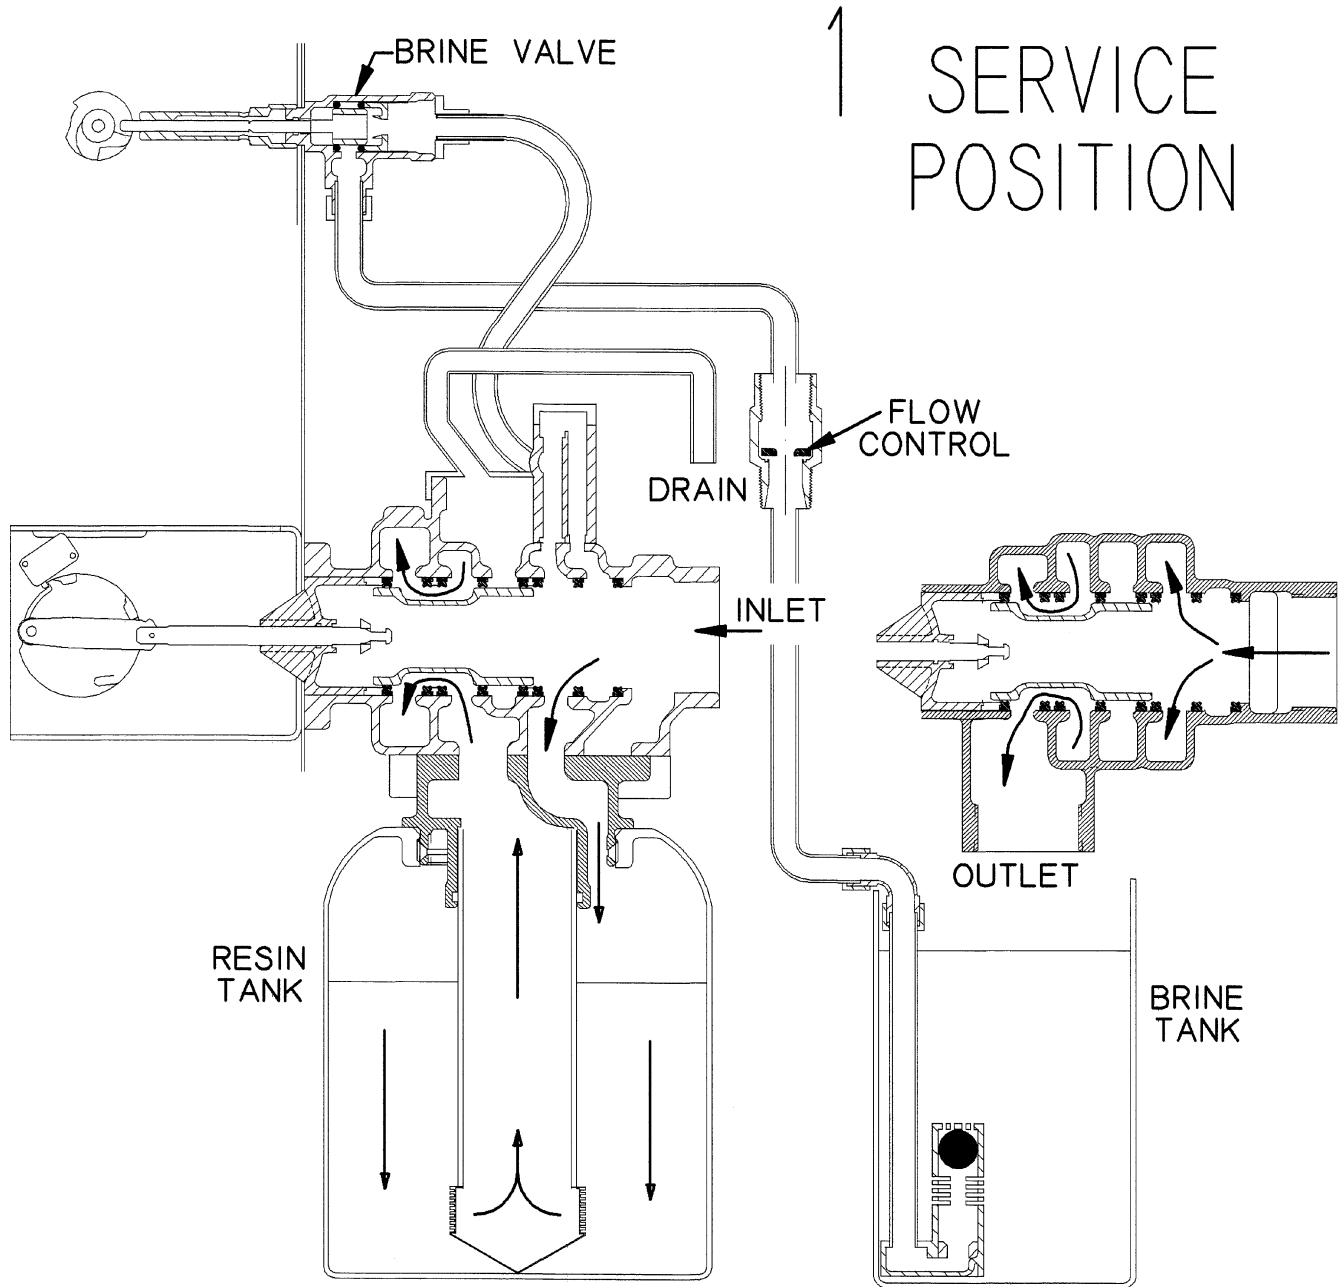

Hard water enters valve inlet - flows thru valve to top of tank. Hard water passes through mineral in mineral tank. Conditioned water enters center tube through bottom distributor - then flows up thru the center tube - around the piston and out the side outlet of the valve.

# MODEL 3130 Downflow


## Water Conditioner Flow Diagrams (Cont'd.)

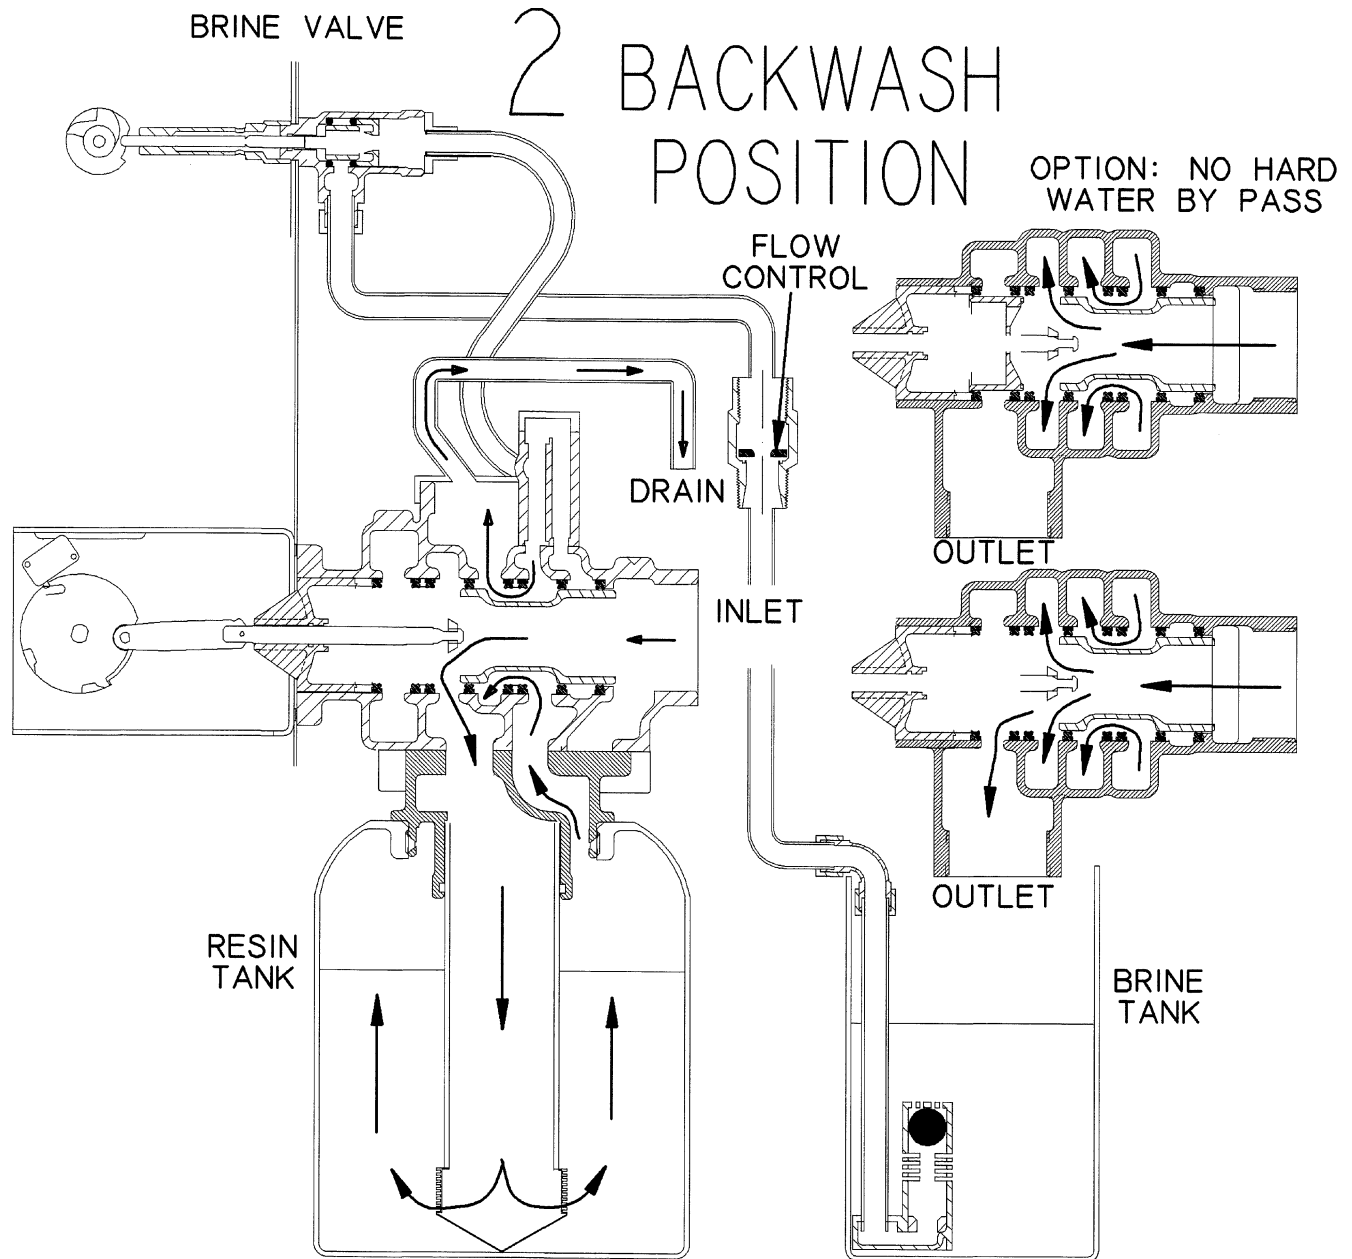

Hard water enters valve inlet - flows thru regeneration piston, (into outlet for service by pass), - down the center tube - thru the bottom distributor and up thru the mineral - around the piston and out the drain line. If optional no hard water by pass piston is used, water flow to outlet is prevented by an extended section of the service piston which closes the outlet port from by pass water until the end of rapid rinse.

# MODEL 3130 Downflow


## Water Conditioner Flow Diagrams (Cont'd.)

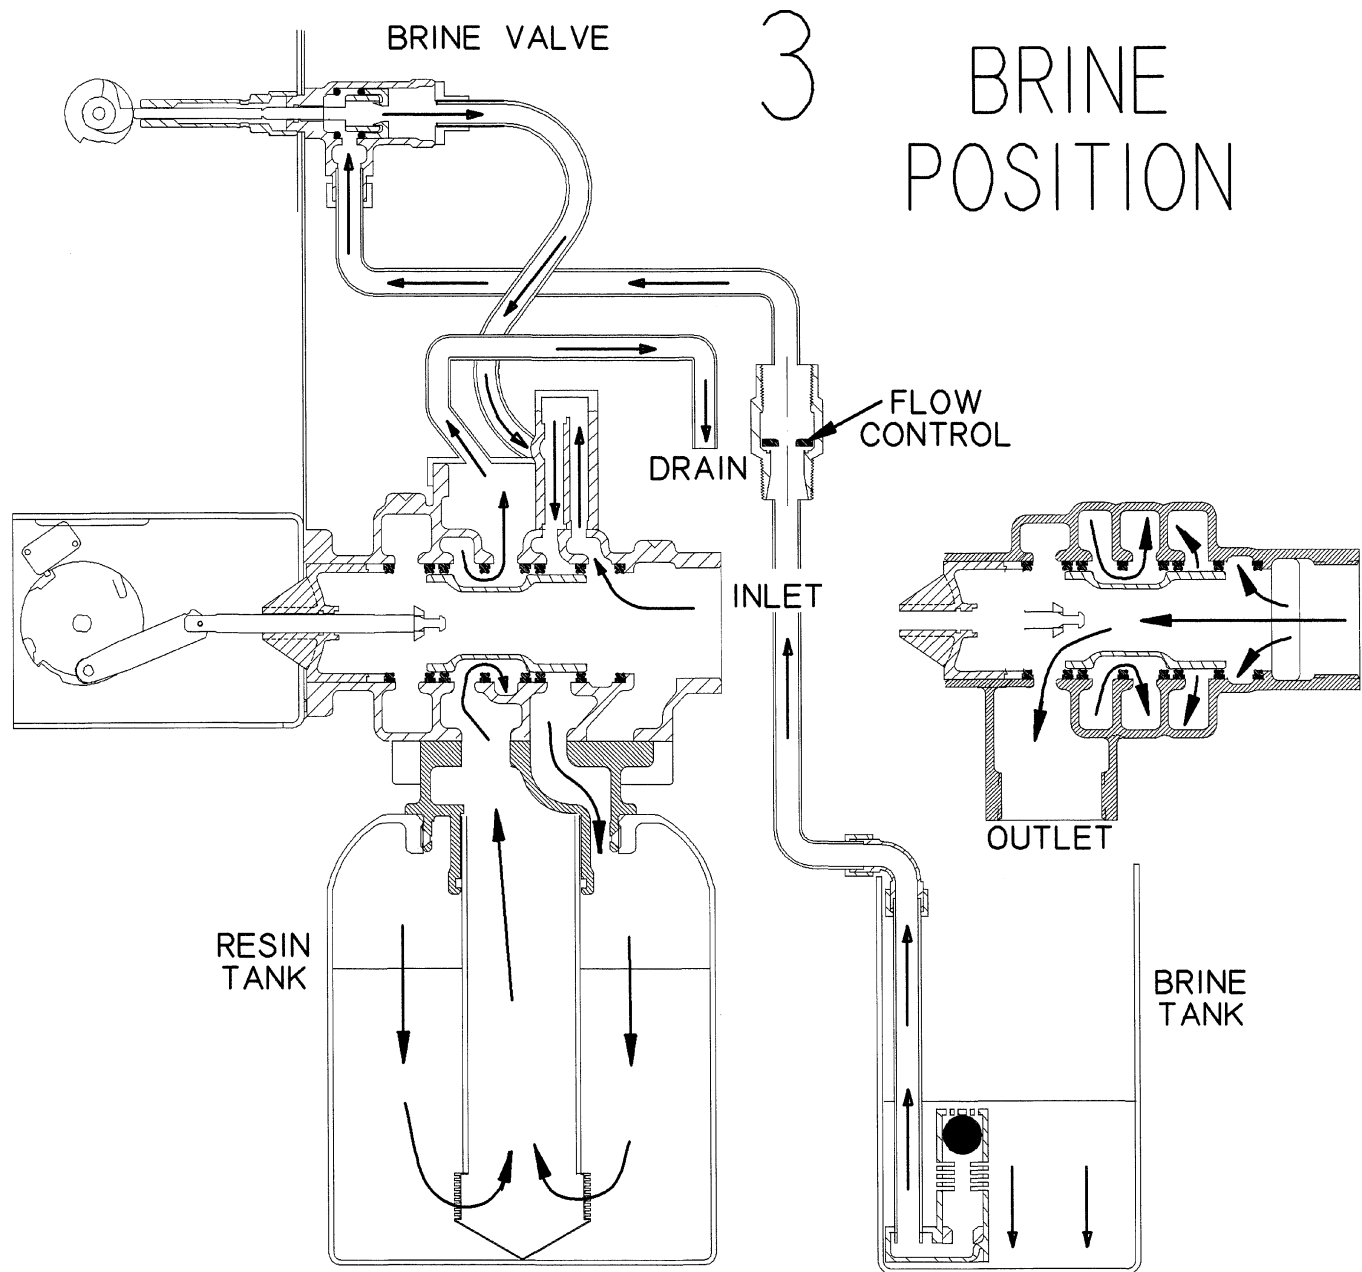

Hard water enters valve inlet - flows up into injector housing and down thru nozzle and throat to draw brine from brine tank - brine flows down thru mineral and enters the center tube thru bottom distributor - flows up thru center tube - around piston and out thru the drain line. Hard water is also available to outlet.

# MODEL 3130 Downflow


## Water Conditioner Flow Diagrams (Cont'd.)

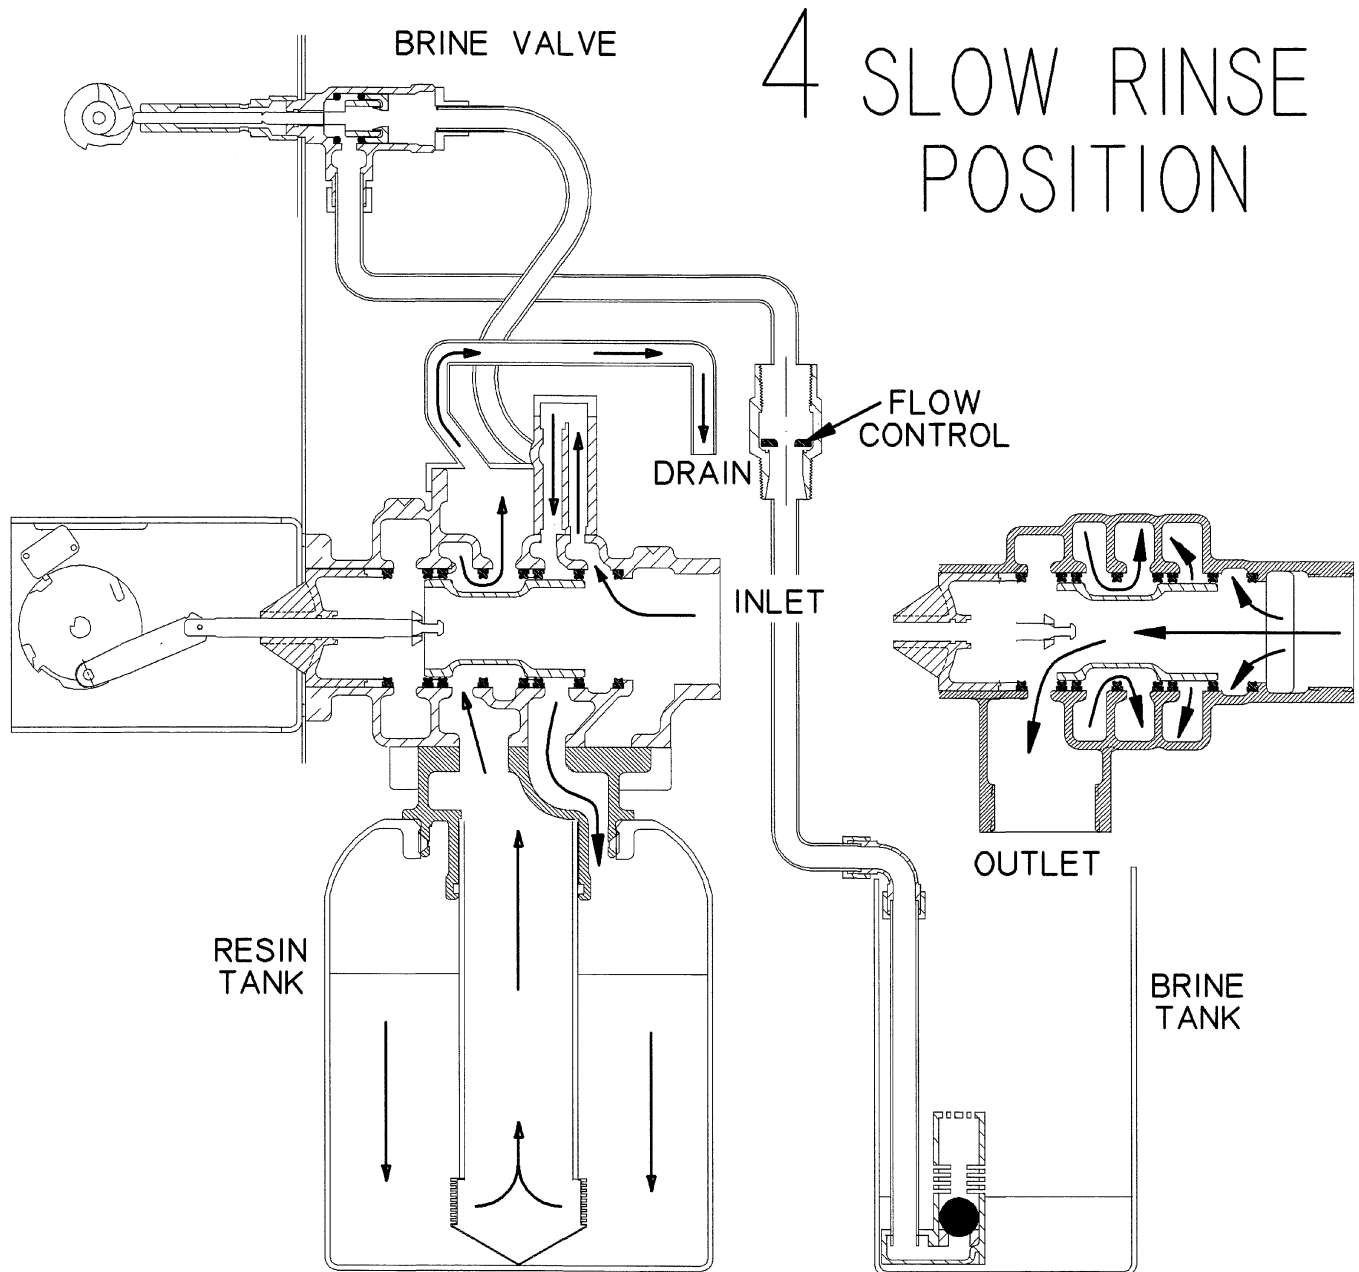

Hard water enters valve inlet - flows up into injector housing and down thru nozzle and throat - around the piston - down thru mineral - enters center tube thru bottom distributor - flows up thru center tube - around piston and out thru drain line. Hard water is also available to outlet.

# MODEL 3130 Downflow

## Water Conditioner Flow Diagrams (Cont'd.)

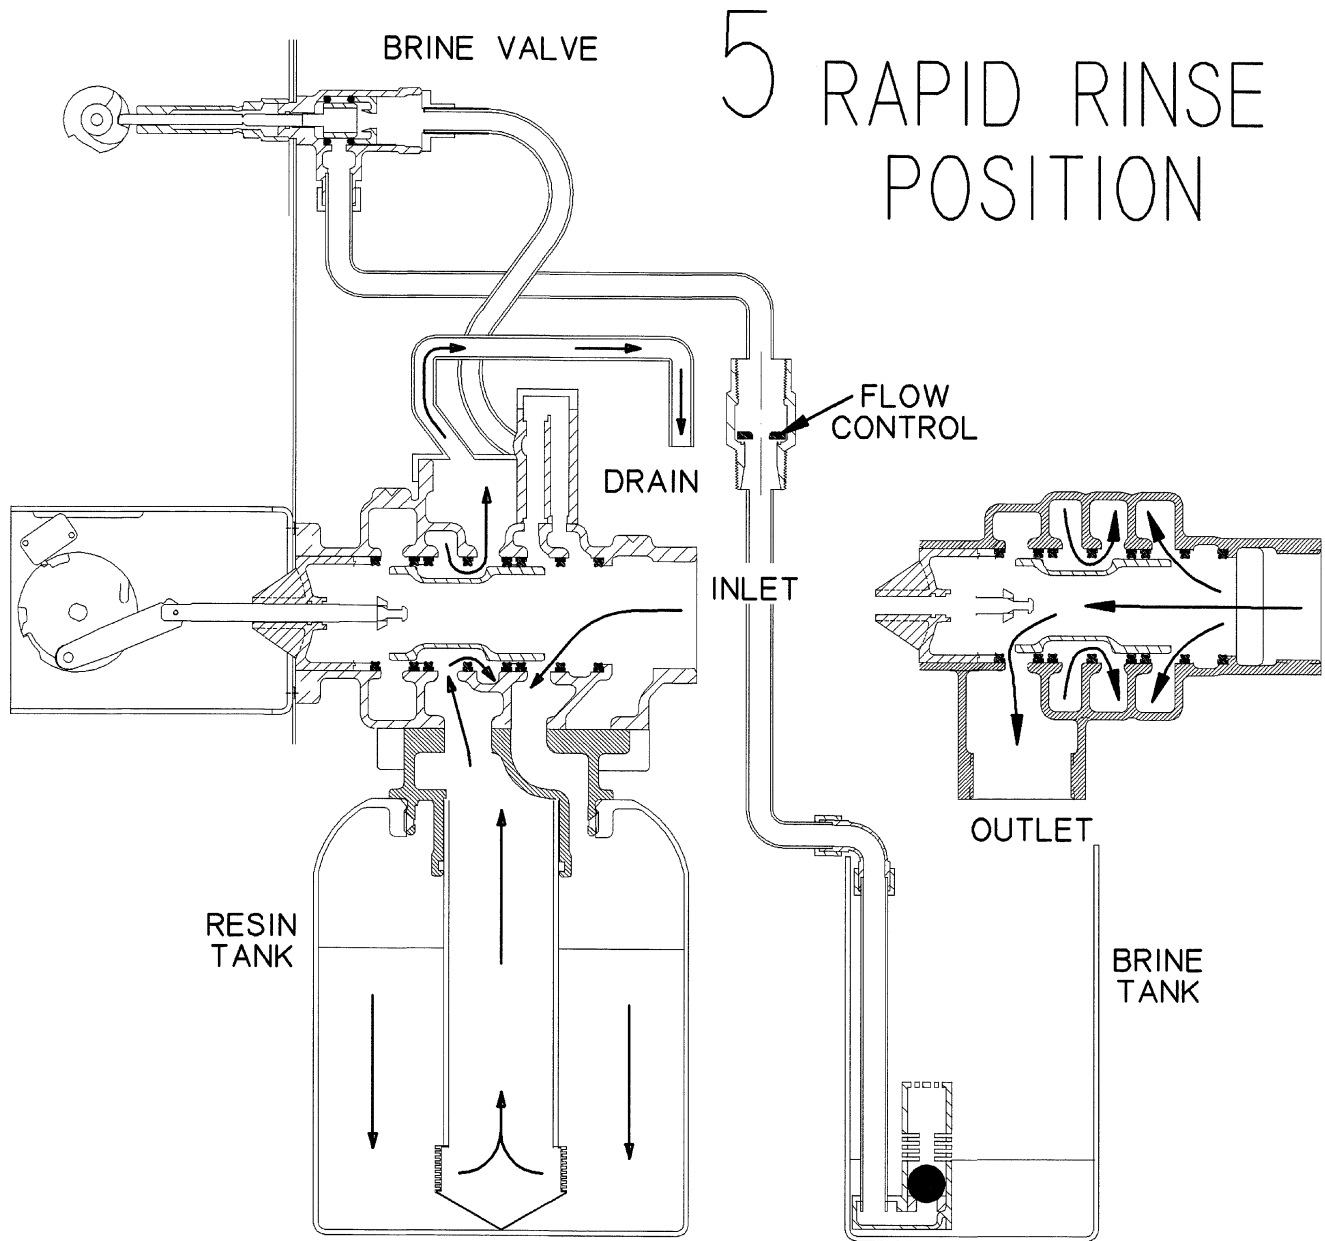


Hard water enters valve inlet - water goes directly down thru top of tank - thru the mineral into the bottom distributor and up thru the center tube - around the piston and out the drain line. Hard water is also available to outlet.



# MODEL 3130 Downflow


## Water Conditioner Flow Diagrams (Cont'd.)

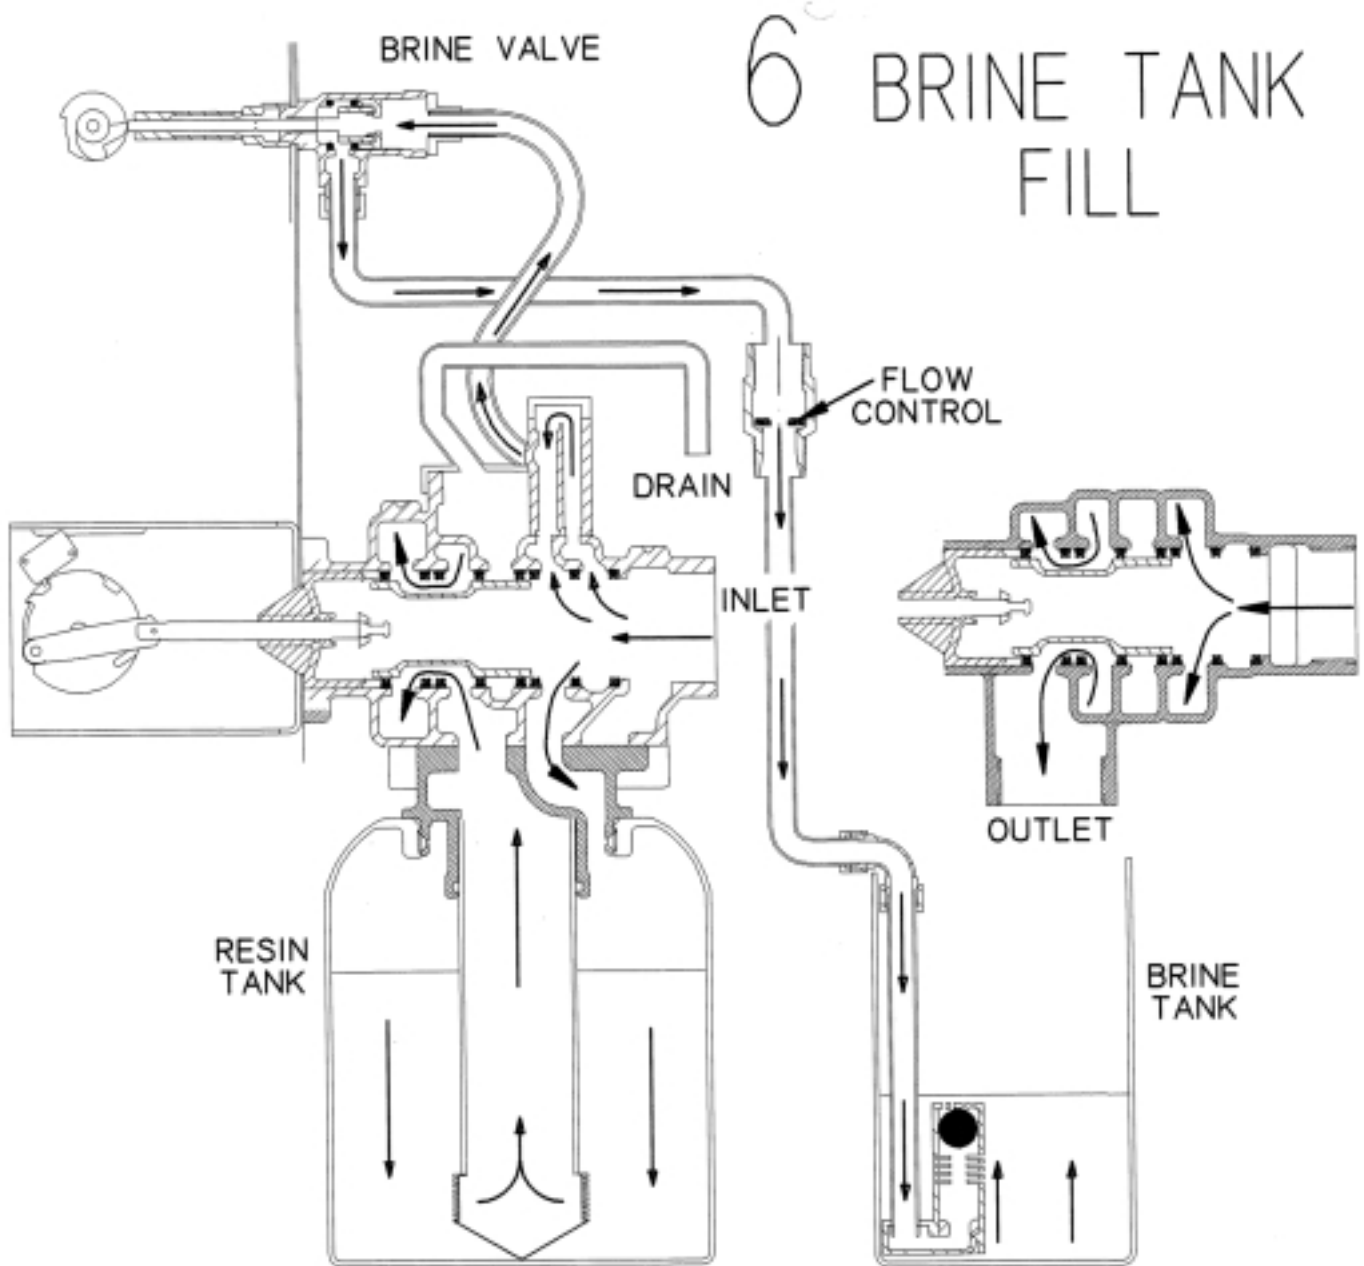

Hard water enters valve inlet - water flows down thru units top of tank - passes thru mineral. Conditioned water enters bottom distributor flows up thru center tube around the piston to the outlet. Hard water flows to the injector housing and brine valve to fill the brine tank.

# MODEL 3130 Upflow


## Water Conditioner Flow Diagrams

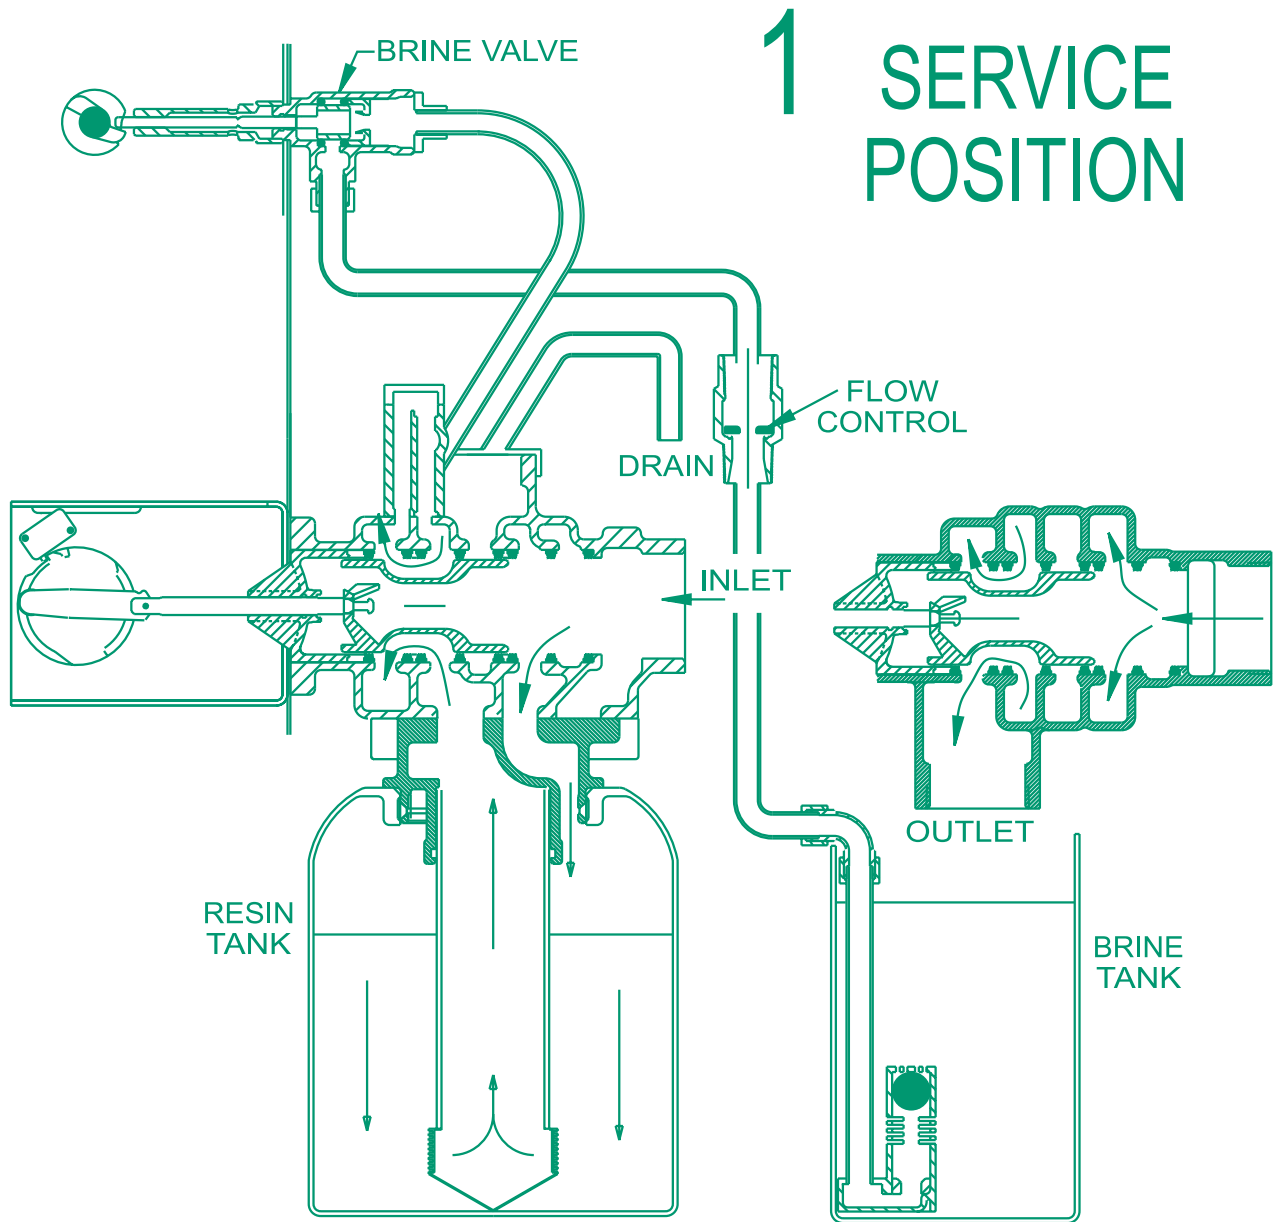

Hard water enters valve inlet - flows thru valve to top of tank.  
Hard water passes through mineral in mineral tank. Conditioned water enters center tube through bottom distributor - then flows up thru the center tube - around the piston and out the side outlet of the valve.

# MODEL 3130 **Upflow**


## Water Conditioner Flow Diagrams (Cont'd.)

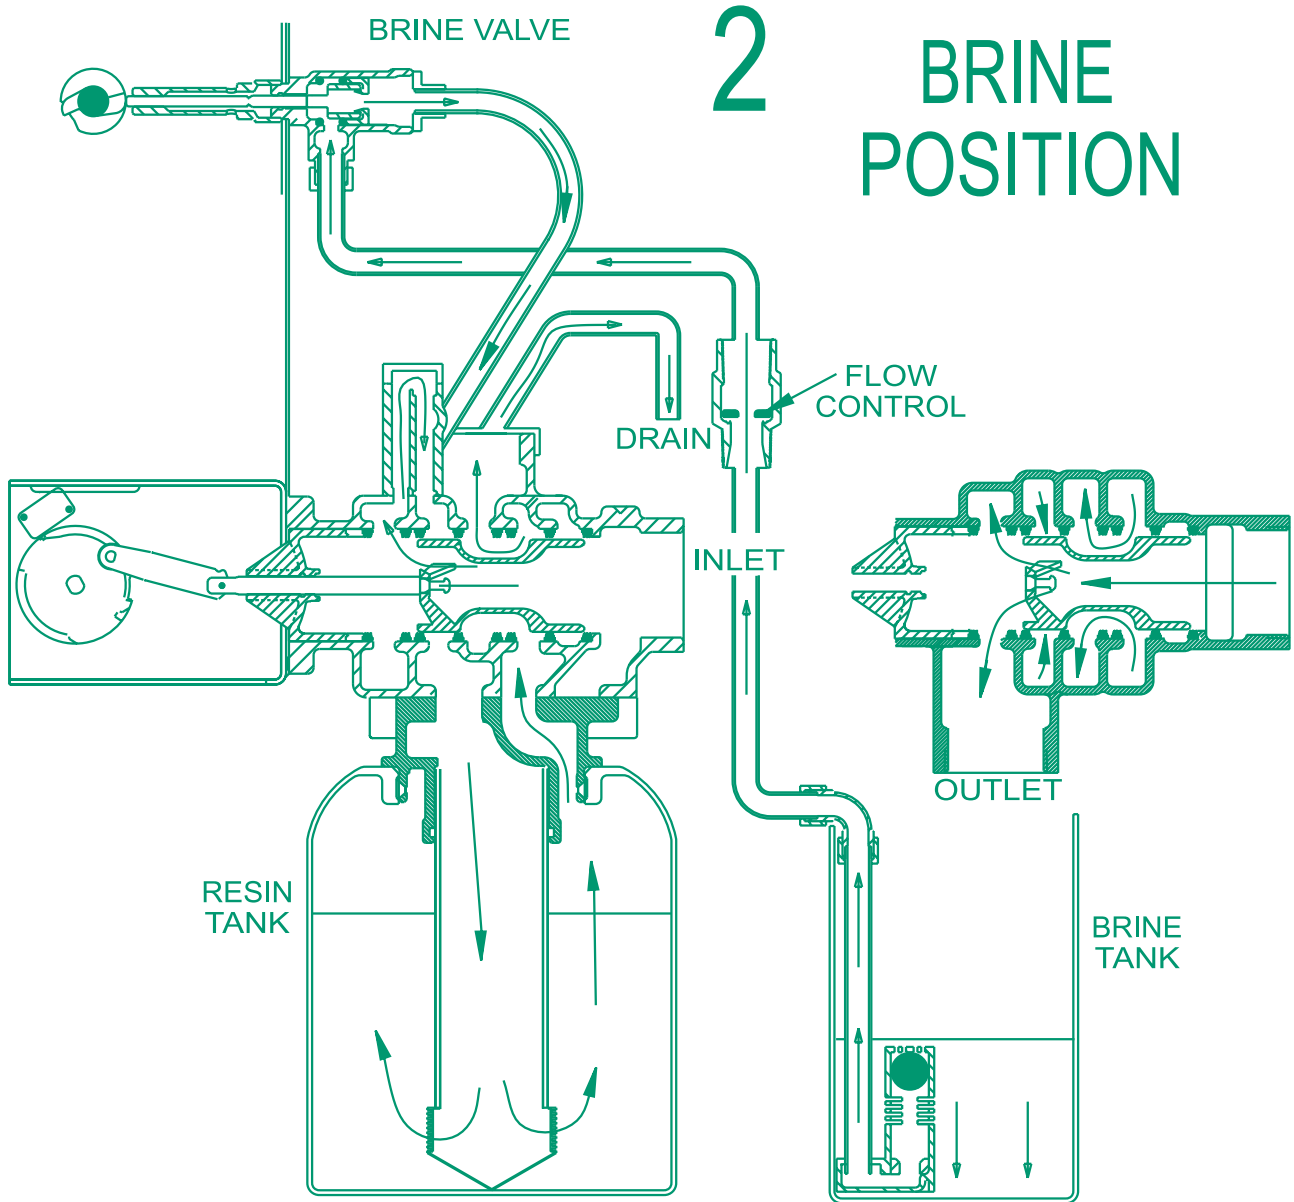

Hard water enters valve inlet - flows thru piston up into injector housing and down thru nozzle and throat to draw brine from brine tank - brine flows thru distributor and up thru mineral and enters the top of tank port - around piston and out thru the drain line. Hard water is also available to outlet.

# MODEL 3130 **Upflow**

## Water Conditioner Flow Diagrams (Cont'd.)

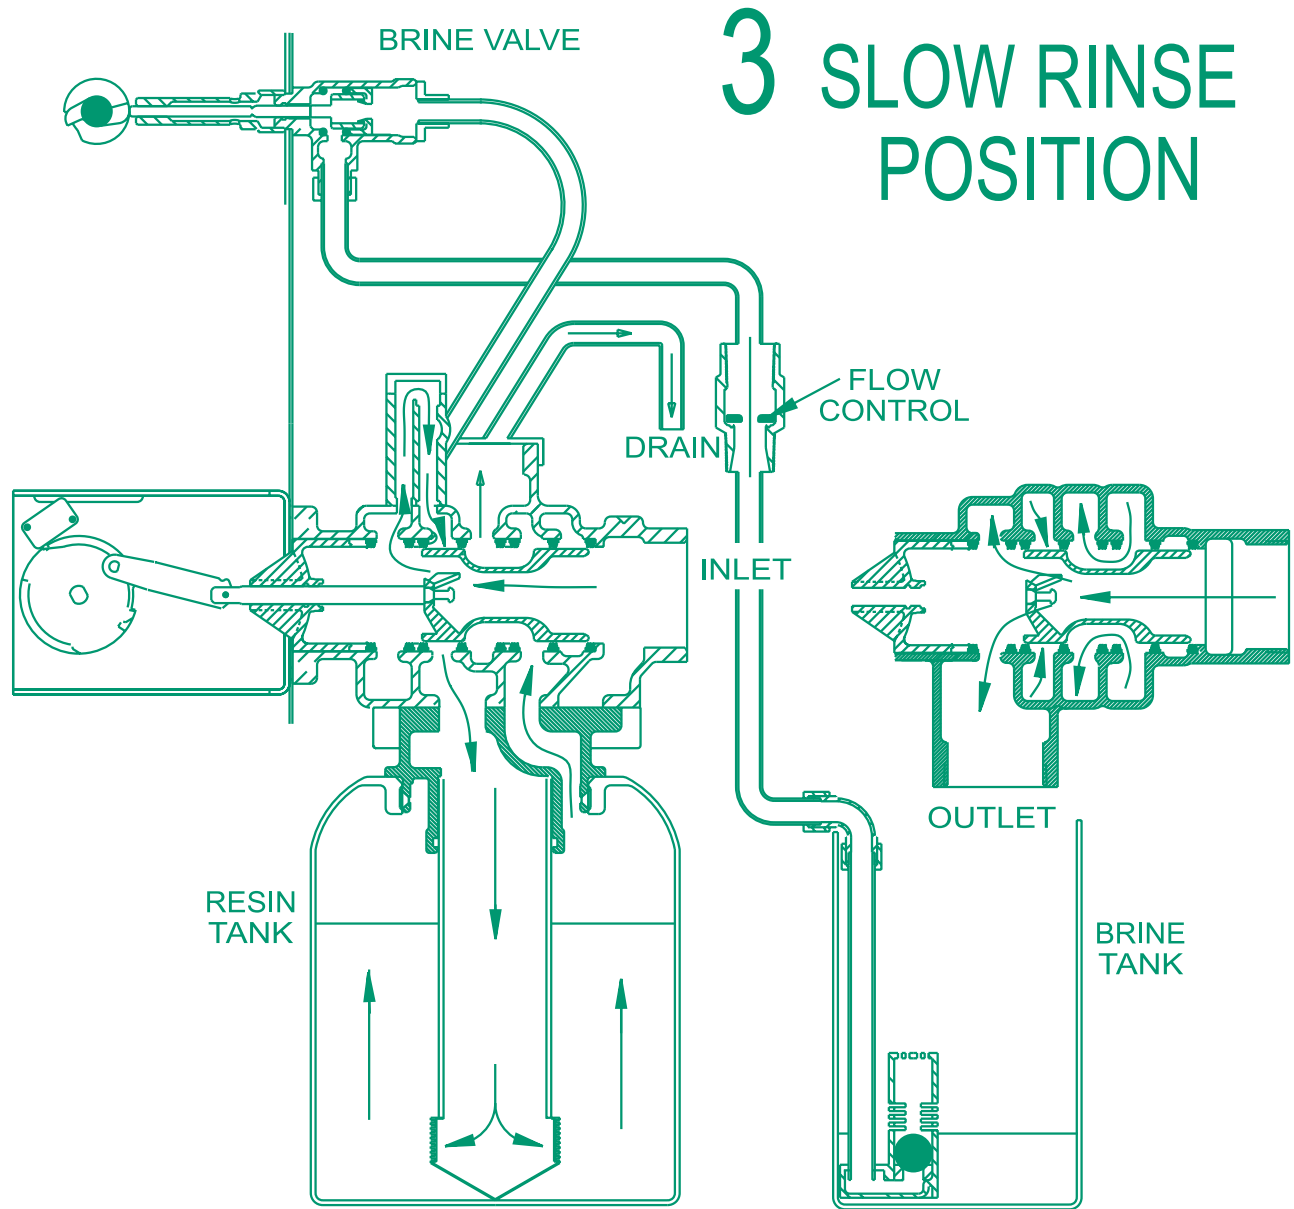


### 3 SLOW RINSE POSITION

Hard water enters valve inlet - flows thru piston up into injector housing and down thru nozzle and throat - thru distributor and up thru mineral and enters the top of tank port - around piston and out thru the drain line. Hard water is also available to outlet.

# MODEL 3130 **Upflow**


## Water Conditioner Flow Diagrams (Cont'd.)

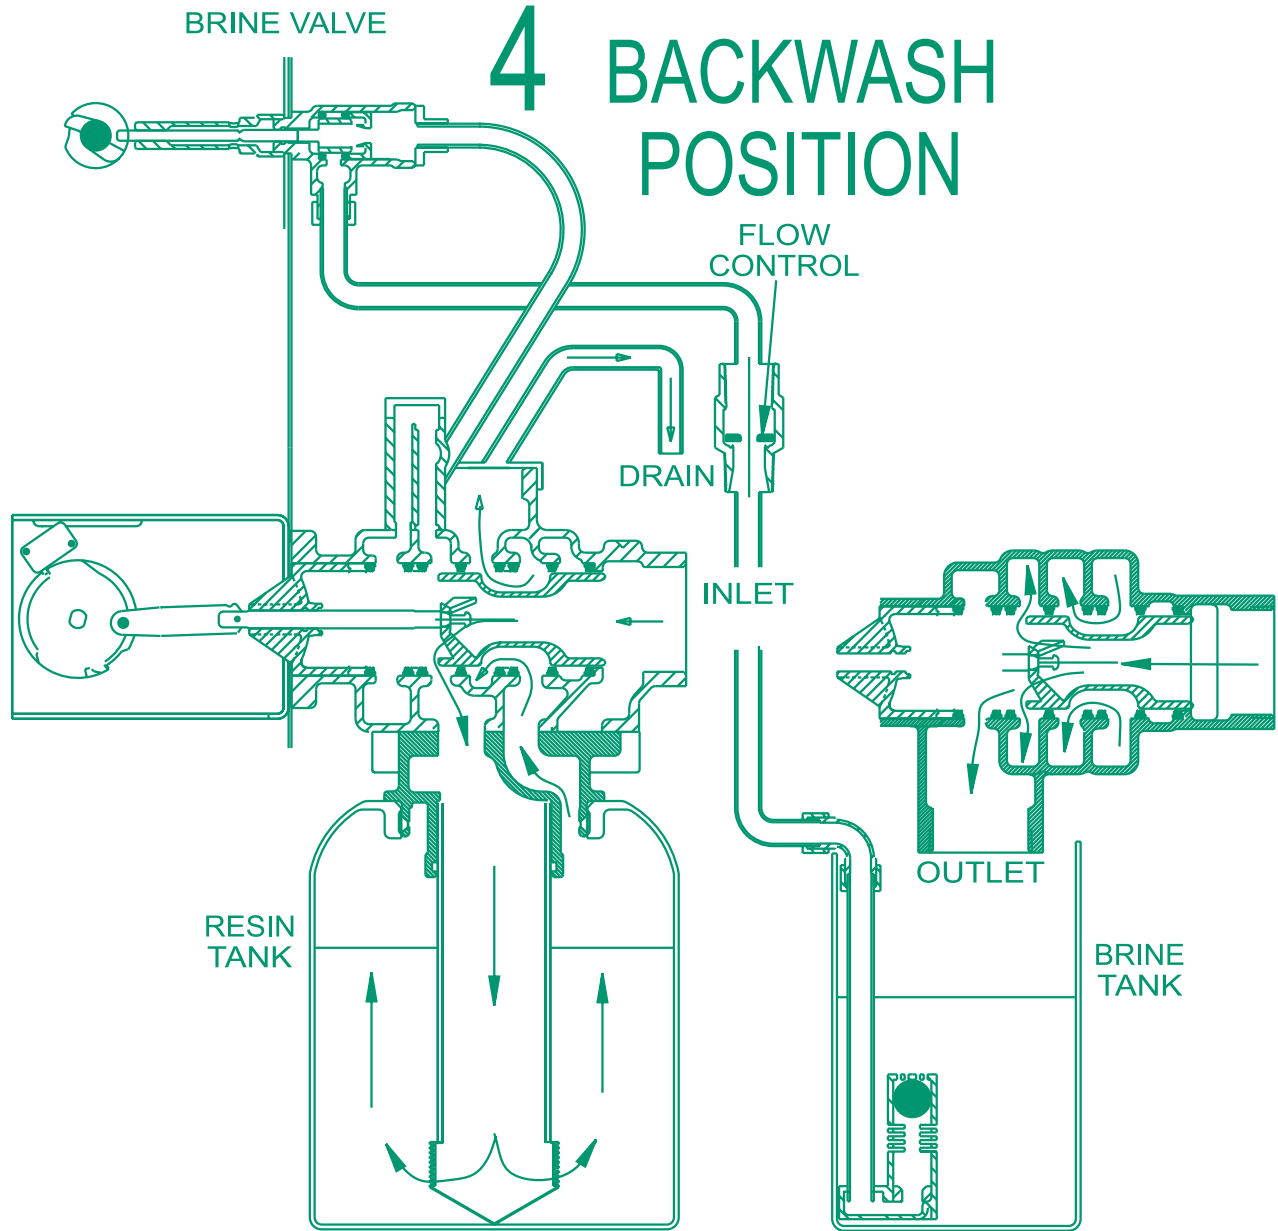

Hard water enters valve inlet - flows thru regeneration piston, (into outlet for service by pass), - down the center tube - thru the bottom distributor and up thru the mineral - around the piston and out the drain line.

# MODEL 3130 Upflow


## Water Conditioner Flow Diagrams (Cont'd.)

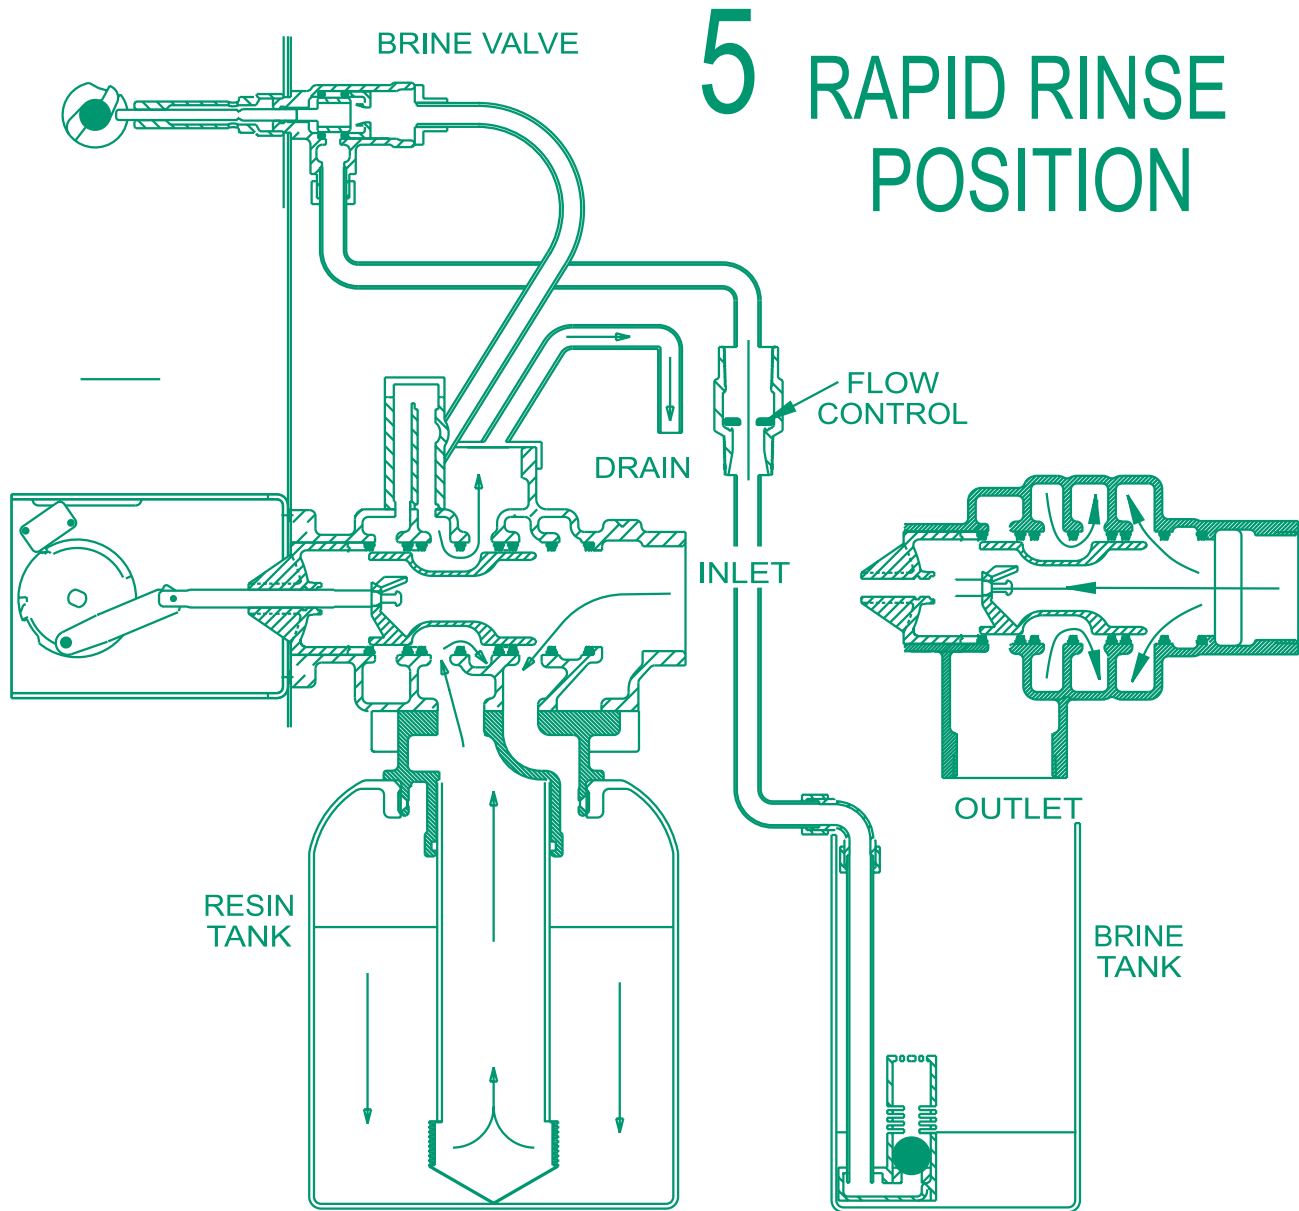

Hard water enters valve inlet - water goes directly down thru top of tank - thru the mineral into the bottom distributor and up thru the center tube - around the piston and out the drain line. Hard water is NOT available to outlet.

# MODEL 3130 **Upflow**

## Water Conditioner Flow Diagrams (Cont'd.)

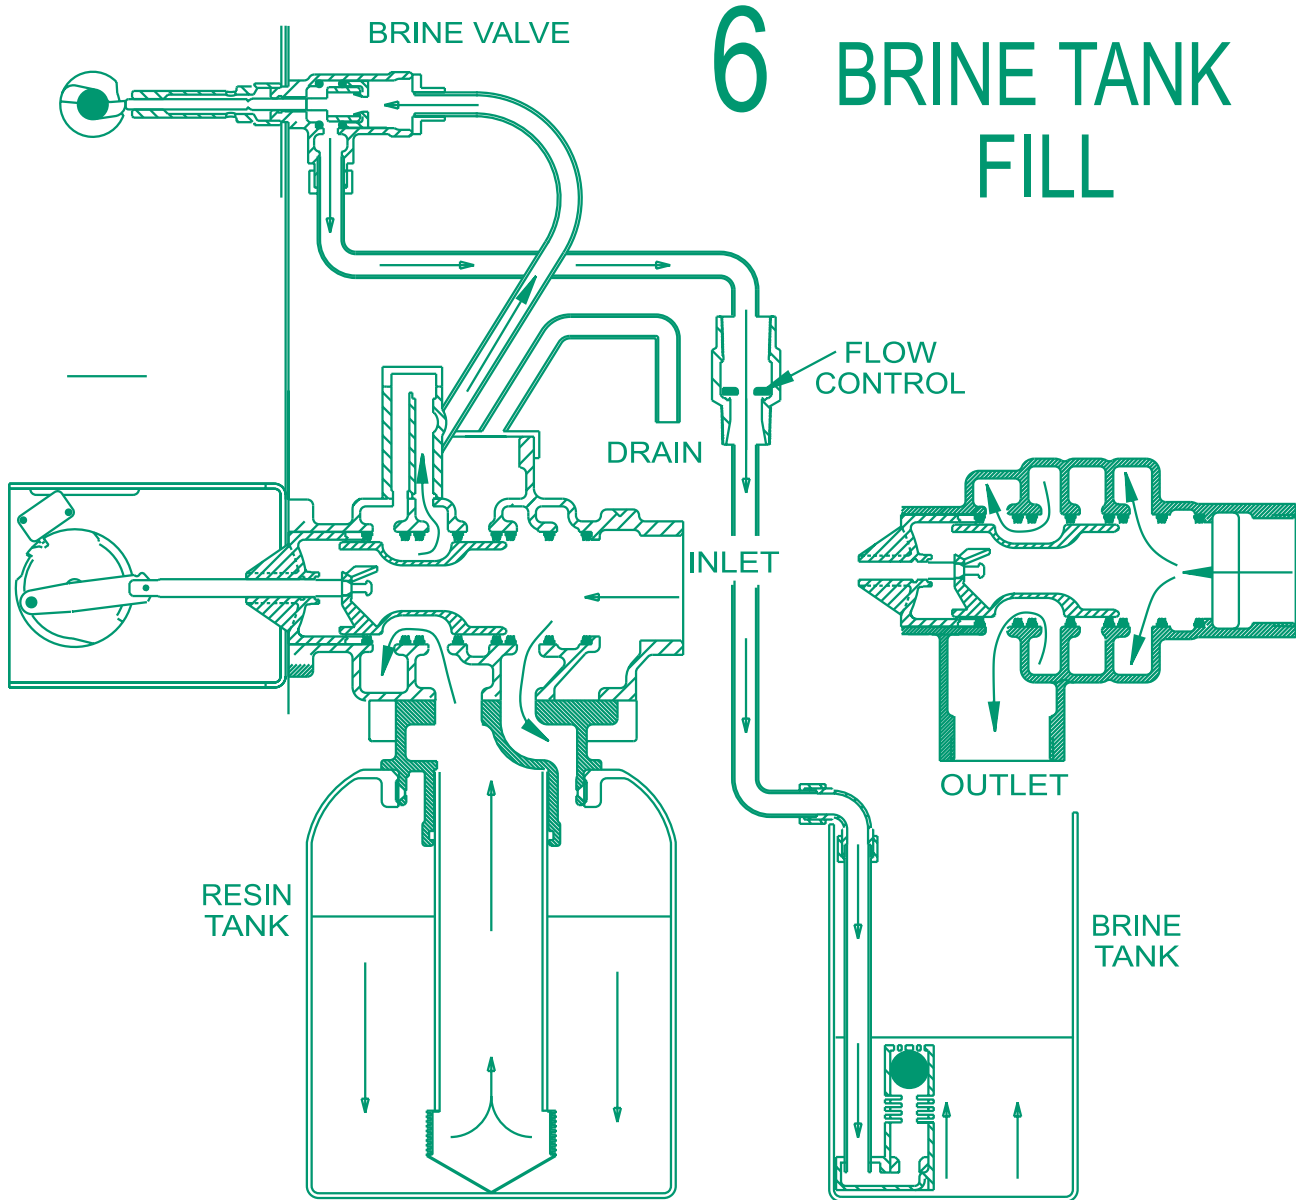


Hard water enters valve inlet - water flows down thru units top of tank - passes thru mineral. Conditioned water enters bottom distributor flows up thru center tube around the piston to the outlet. Conditioned water flows to the injector housing and brine valve to fill the brine tank.

# MODEL 3130

## Control Valve

(See opposite page for parts list)

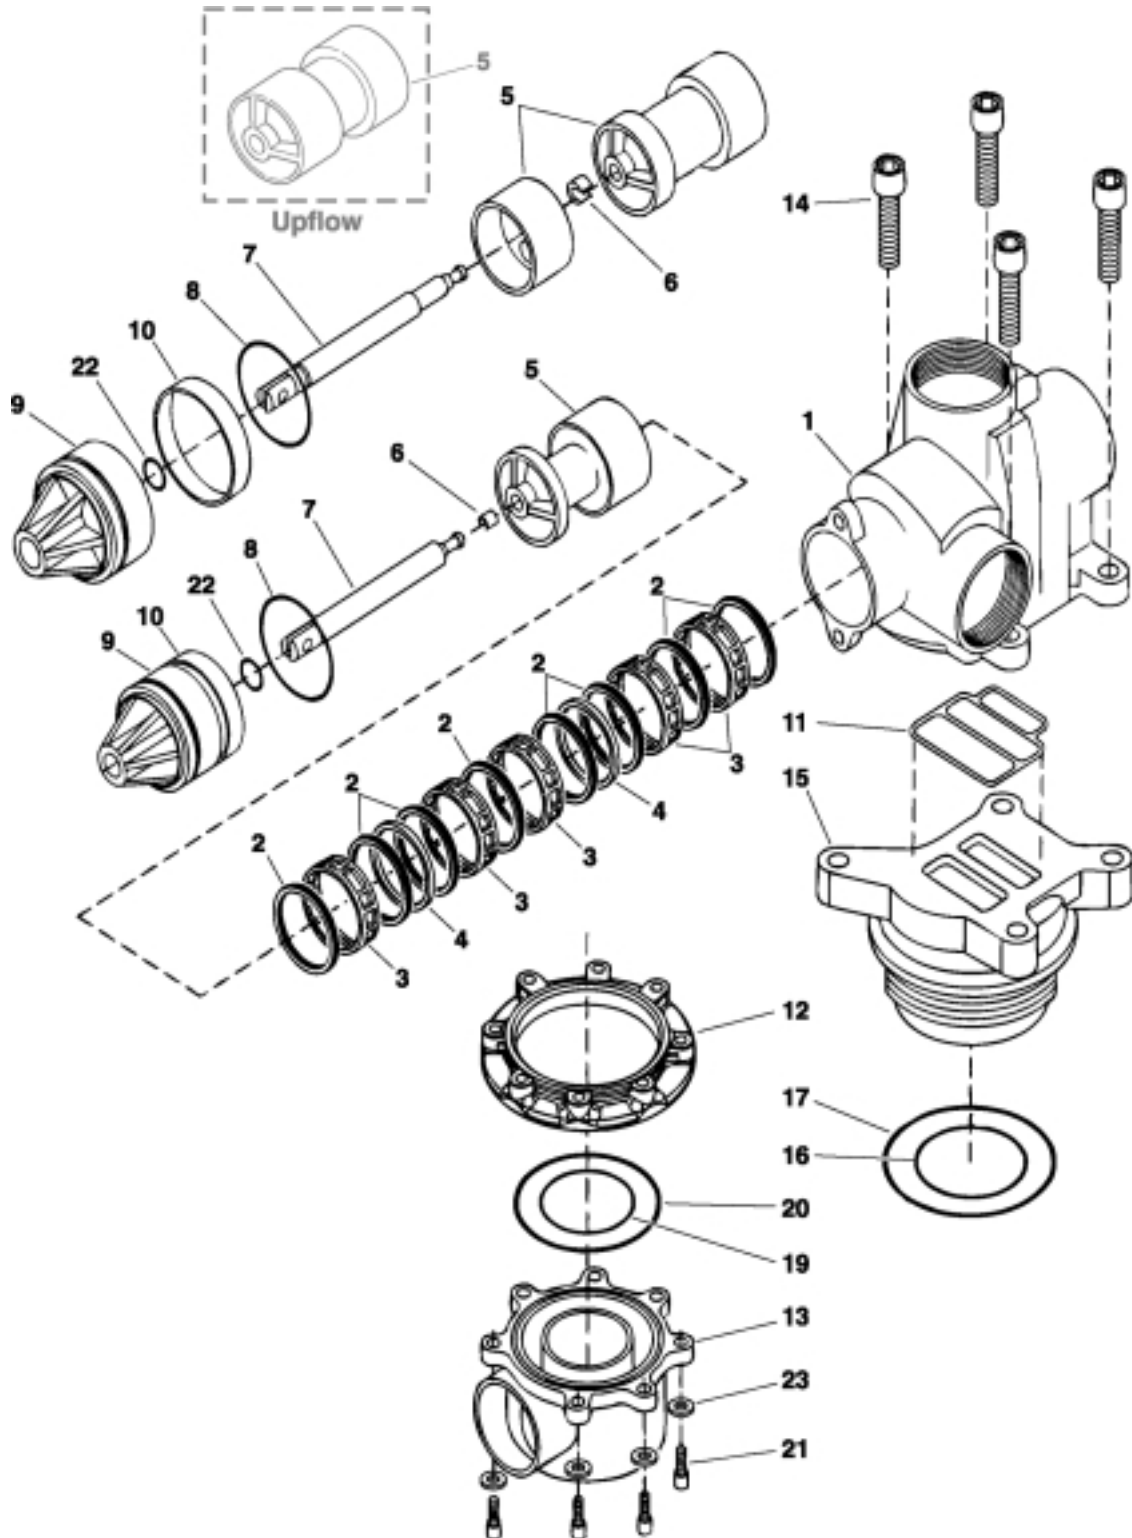



# MODEL 3130

## Control Valve

### Parts List


Item No.	Quantity	Part No.	Description
1.....	1 .....	40191 .....	Valve Body
2.....	8 .....	11720 .....	Seal
3.....	5 .....	10369 .....	Spacer - Port
4.....	2 .....	10368 .....	Spacer
5.....	1 .....	16130 .....	Piston
	1 .....	19611-12.....	Piston Assy. NHWB-P
		40288 .....	Piston, Upflow
6.....	1 .....	14818 .....	Clip - Piston Rod
7.....	1 .....	40205 .....	Piston Rod
		40205-01.....	Piston Rod, NHWB-P
8.....	1 .....	14922 .....	O-Ring - 035
9.....	1 .....	14754-01.....	End Plug White
		14754-11.....	End Plug Black NHWB-P
10.....	1 .....	40203 .....	Spacer, Endplug
11.....	1 .....	40189 .....	Seal
12.....	1 .....	40316 .....	Adapter - Side Mount
13.....	1 .....	40365 .....	Base, 3130/3150 Side Mount
14.....	4 .....	40118 .....	Screw - SHCS
<b>Options</b>			
15.....	1 .....	40230 .....	Adapter - Top Mount 4" - 8 Th'd.
* 16.....	1 .....	15247 .....	O-Ring - 229 (Dist.)
17.....	1 .....	13575 .....	O-Ring - 240 (Tank)
	1 .....	15210 .....	O-Ring (Park Tank)
18.....	1 .....	19608-20.....	Dispenser, Upper (Not shown)
19.....	1 .....	40368 .....	O-Ring, Side Mount Adapter - 160
20.....	1 .....	16804-01.....	O-Ring, Side Mount Adapter - 150
21.....	7 .....	19768 .....	Screw, SHCS
22.....	1 .....	14926 .....	Seal, End Plug Quad
23.....	7 .....	40375 .....	Washer

\* Item 16 is not required when side mounted.

# MODEL 3130

## Control Drive Assembly

(See opposite page for parts list)

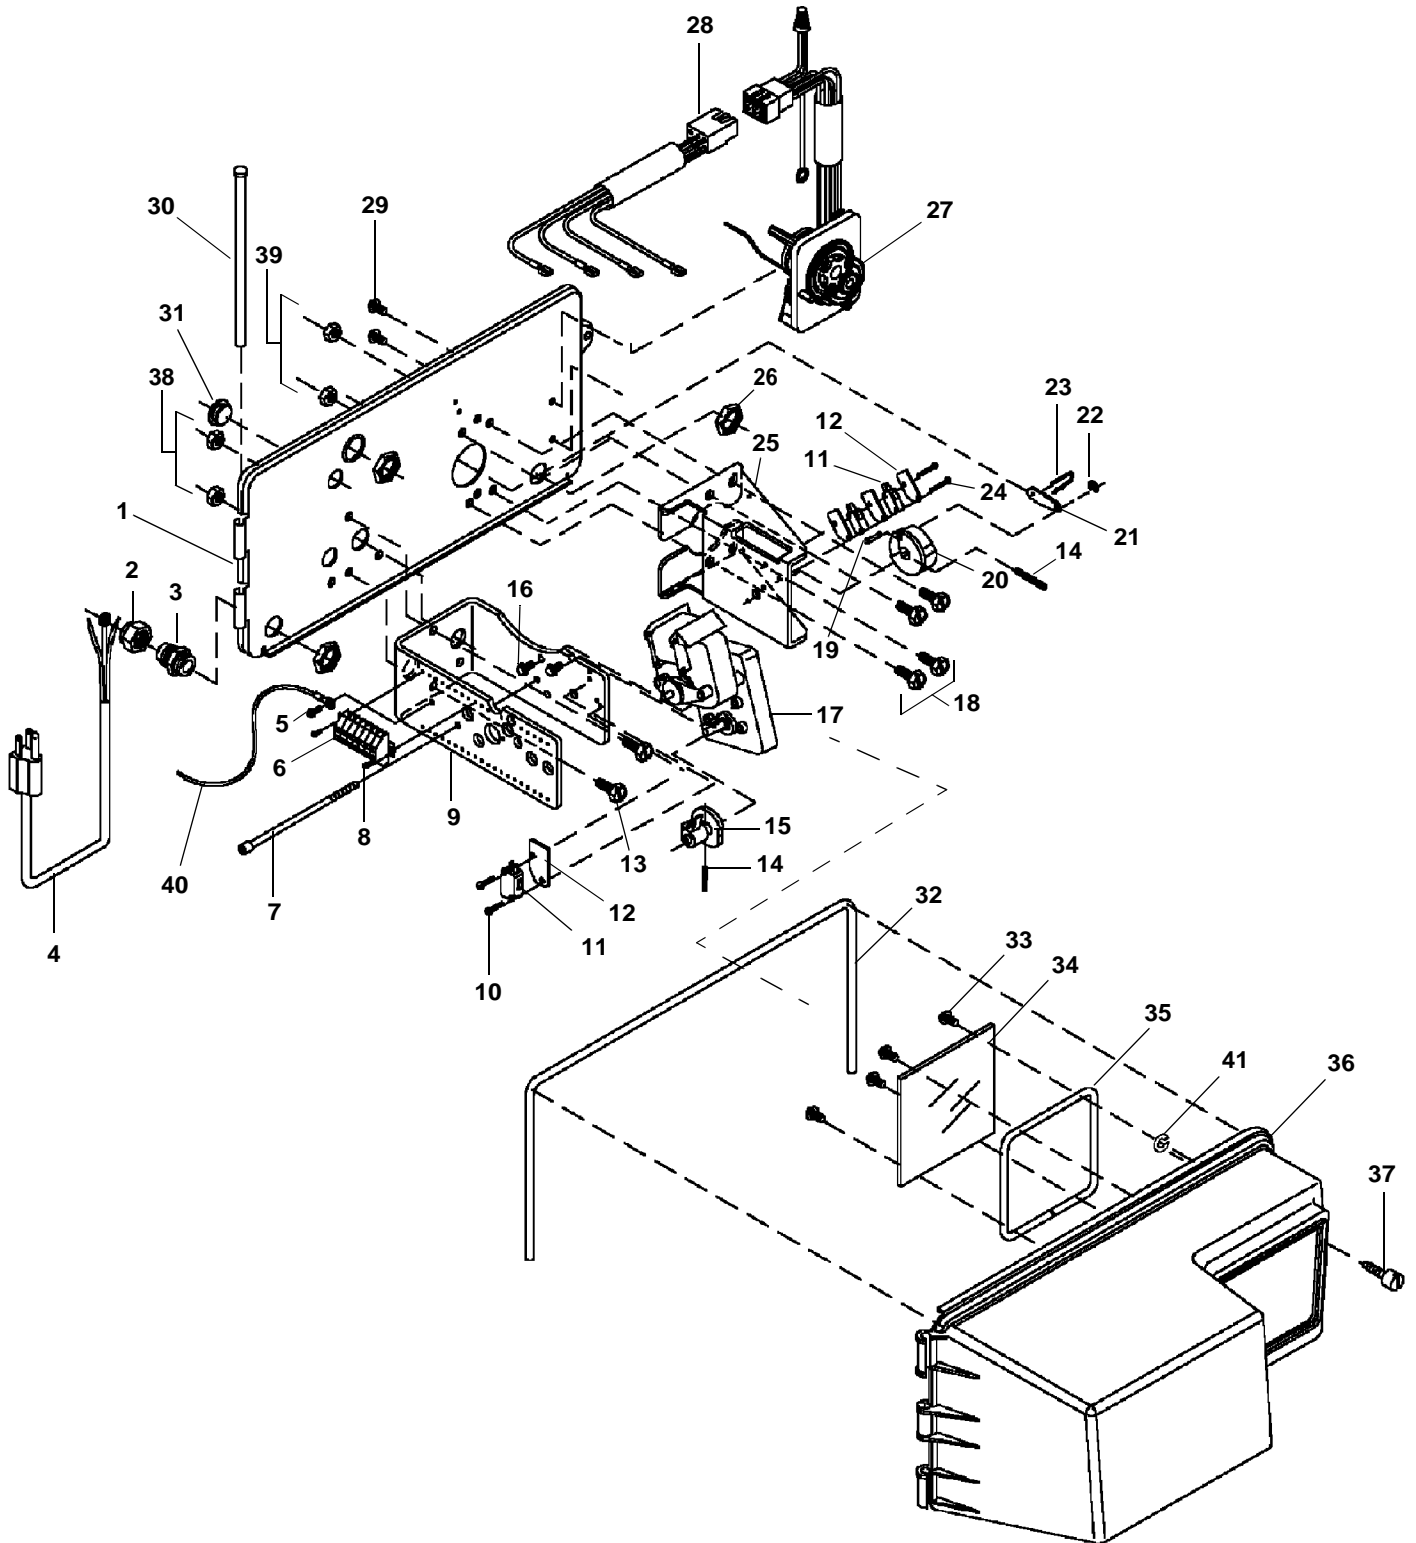

# MODEL 3130

## Control Drive Assembly


### Parts List

Item No.	Quantity	Part No.	Description
1	1	40200-00	Backplate
2	1	17967	Strain Relief
3	1	14924	Strain Relief
4	1	40084-12	12 ft. Power Cord
5	1	40193	Ground Screw
6	1	15226-X	Terminal Strip (X denotes the number of terminals)
7	1	40349	Screw, Brine Deflection
8	2	40133	Screw, Term. Block
9	1	40201	Bracket, Brine
10	2	11805	Screw, Micro Switch
11	3	10218	Switch, Micro
12	2	10302	Insulator
13	2	10231	Screw, Brine Bracket
14	2	10338	Pin, Roll
15	1	12777	Cam, Brine Valve
		19459	Cam, Upflow Brine
16	7	10872	Screw, Motor
17	1	40190-1156	Motor, 115V 50/60 Hz
	1	40190-2305	Motor, 230V 50/60 Hz
	1	40190-245	Motor, 24V 50/60 Hz
18	4	11224	Screw, Motor Bracket
19	1	14784	Bearing, Cycle Cam Drive
20	1	40198	Cam, Cycle Downflow
		40236	Cam, Cycle Upflow
21	1	40197	Link, Drive
22	1	10250	Ring, Retaining
23	1	14813	Clip, Piston Rod
24	2	14923	Screw, Micro Switch
25	1	40202	Bracket, Motor
26	1	17967	Fitting, Liquid Tight
27	1		Timer Assembly
28	1	16430	Harness, Upper Timer
29	2	10300	Screw, Timer
30	1	17845-03	Pin, Hinge
31	2	19692	Plug, Knock Out
32	1	18716-03	Seal, Cover
33	4	19203	Screw, Window Cover
34	1	18745	Window
35	1	18615-02	Seal, Window
36	1	19277-020	Cover, Black
37	1	19813	Screw, Cover
38	2	11235	Nut, Brine Bracket
39	2	16346	Nut, Drive Bracket
40	1	40175-01	Wire, Ground
41	1	19856	Ring, Retaining

# MODEL 3130 Downflow

## 1705 Brine System

(See opposite page for parts list)

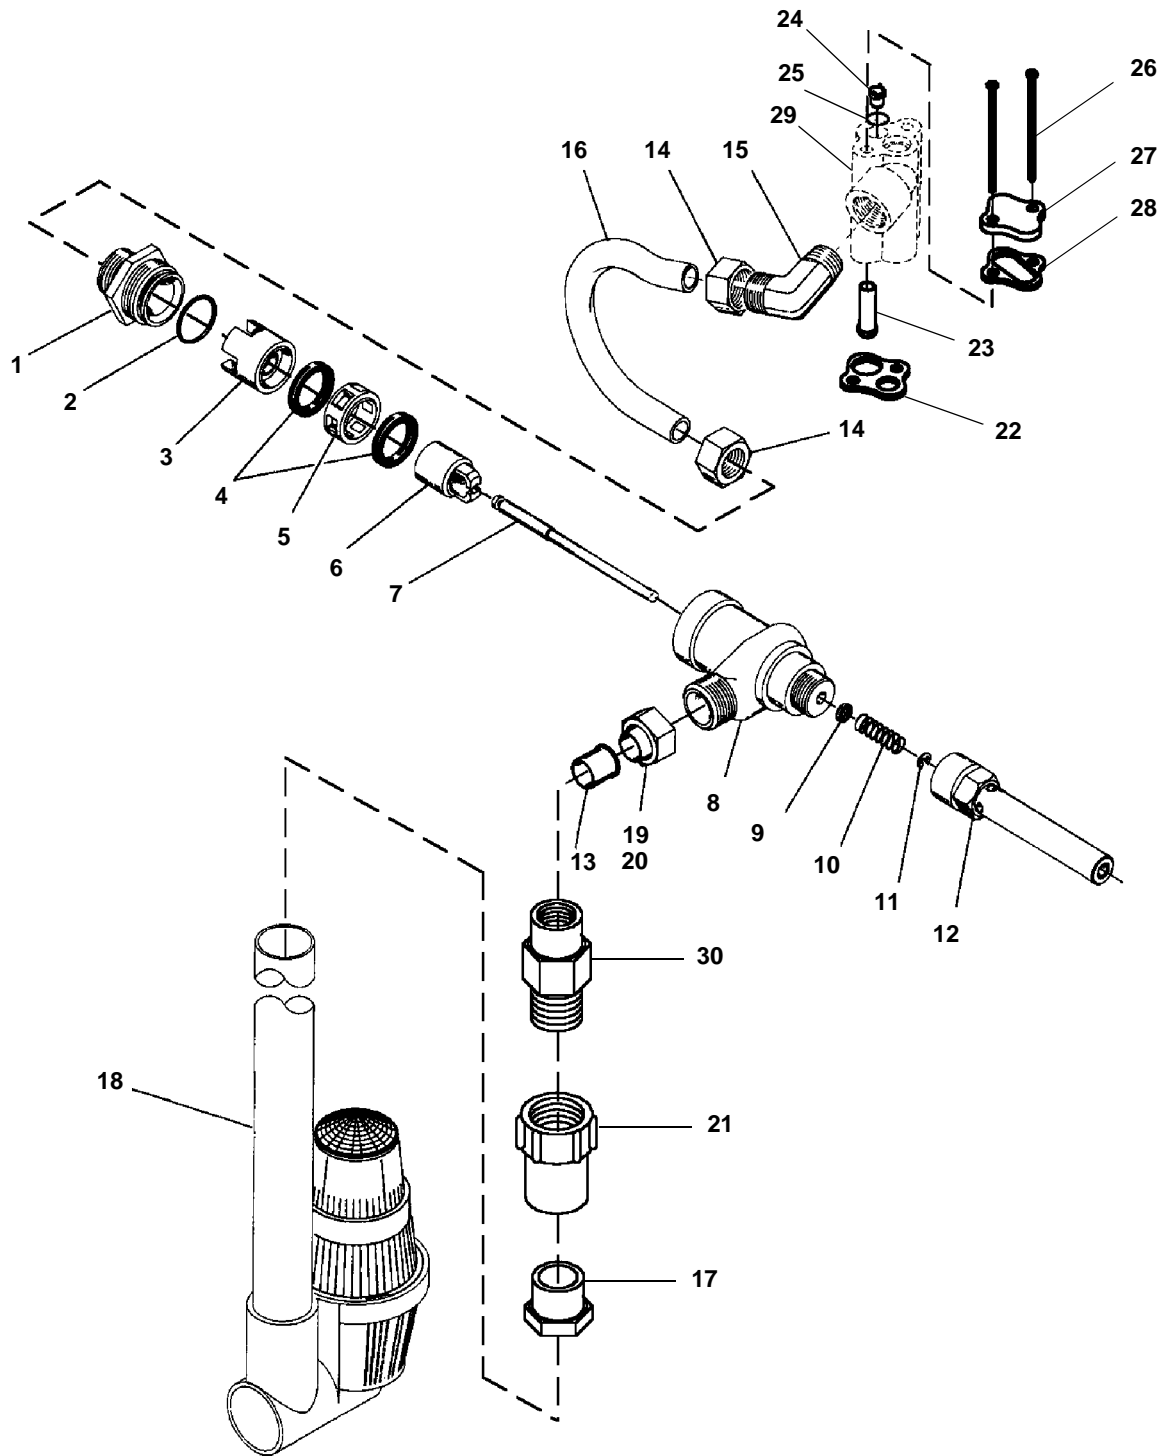

# MODEL 3130 Downflow

## 1705 Brine System

### Parts List

Item No.	Quantity	Part No.	Description
1	1	14792	End Plug
2	1	13201	O-Ring - End Plug
3	1	14785-01	Flow Control Retainer
4	2	14811	Piston Seals
5	1	14798	Spacer
6	1	14795	Brine Valve Piston
7	1	40199	Brine Valve Stem
8	1	14790	Brine Valve Body
9	1	12550	Quad Ring - Brine Stem
10	1	15310	Spring - Brine Valve
11	1	10250	Retaining Ring
12	1	40213	Stem Guide
13	2	15415	Insert
14	2	15414	Nut Ferrule 1/2"
15	1	15413	Elbow
16	1	40242	Brine Tube
		40366	Tube, Upflow Brine
17	1	16976	1" Slip to 3/4" Reducer
18	1	60009	#900 Air Check Assembly
19	2	16123	Tube Nut 1/2"
20	2	16124	Ferrule 1/2"
21	1	16975	1" Female NPT x 1" Slip
22	1	19925	Gasket, Injector Body
23	1	14802-*	Throat, Injector
24	1	14801-*	Nozzle, Injector
25	1	13771	O-Ring, 012
26	2	14804	Screw, Injector Body
27	1	10228	Cap, Brass
28	1	10229	Gasket, Injector Cover
29	1	17777-03	Body, Injector
30	1	16530	Housing, BLFC 1" NPT Male x 1" NPT Female
		16530-10	Housing, BLFC 1" BSP Male x 1" BSP Female

\* Brine valve is not available with internal flow control. External flow control is required.

#### Option Without Brine Valve

1	11893	Cover, Injector
2	12112	Screw, Injector Cover

#### Injector Throat


14802-04C	#4	Green
14802-05C	#5	White
14802-06C	#6	Red
14802-07C	#7	Black

#### Injector Nozzle

14801-04C	#4	Green
14801-05C	#5	White
14801-06C	#6	Red
14801-07C	#7	Black

# MODEL 3130 Upflow

## Regulation Assembly 1705

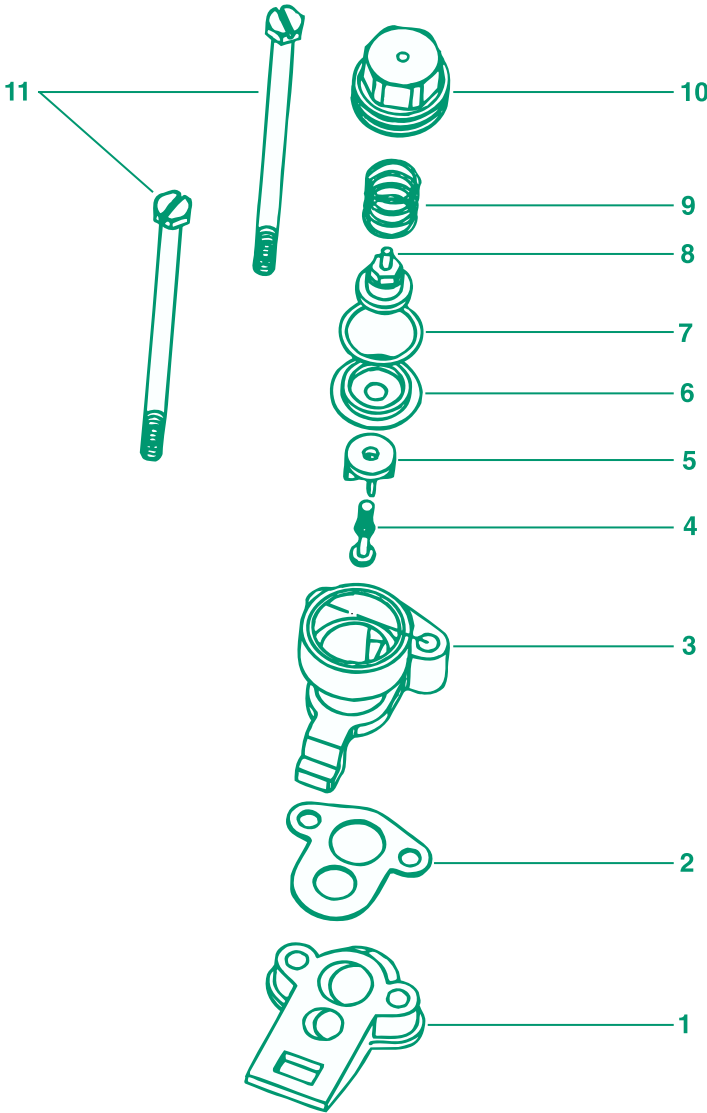

# MODEL 3130 **Upflow**


## *Regulator Assembly 1705*

### *Parts List*

Item No.	Quantity	Part No.	Description
1.....	1 .....	19482-01 .....	Adapter, Regulator, 1700
2.....	1 .....	19925 .....	Gasket, Regulator, 1700
3.....	1 .....	19464-01 .....	Body, Regulator, 1700
4.....	1 .....	19924 .....	Stem, Regulator, 1700
5.....	1 .....	19463 .....	Seat, Regulator
6.....	1 .....	18568 .....	Diaphragm, Regulator
7.....	1 .....	14848 .....	Washer, Regulator
8.....	1 .....	18571 .....	Retainer, Regulator
9.....	1 .....	19917 .....	Spring, Regulator, 1700
10.....	1 .....	18570-30.....	Cap, 30 psi Regulator
11.....	2 .....	19718 .....	Screw, #10x3.50
		26760 .....	Screw, M5x90mm

# MODEL 3130

## 2" Plastic Meter Assembly

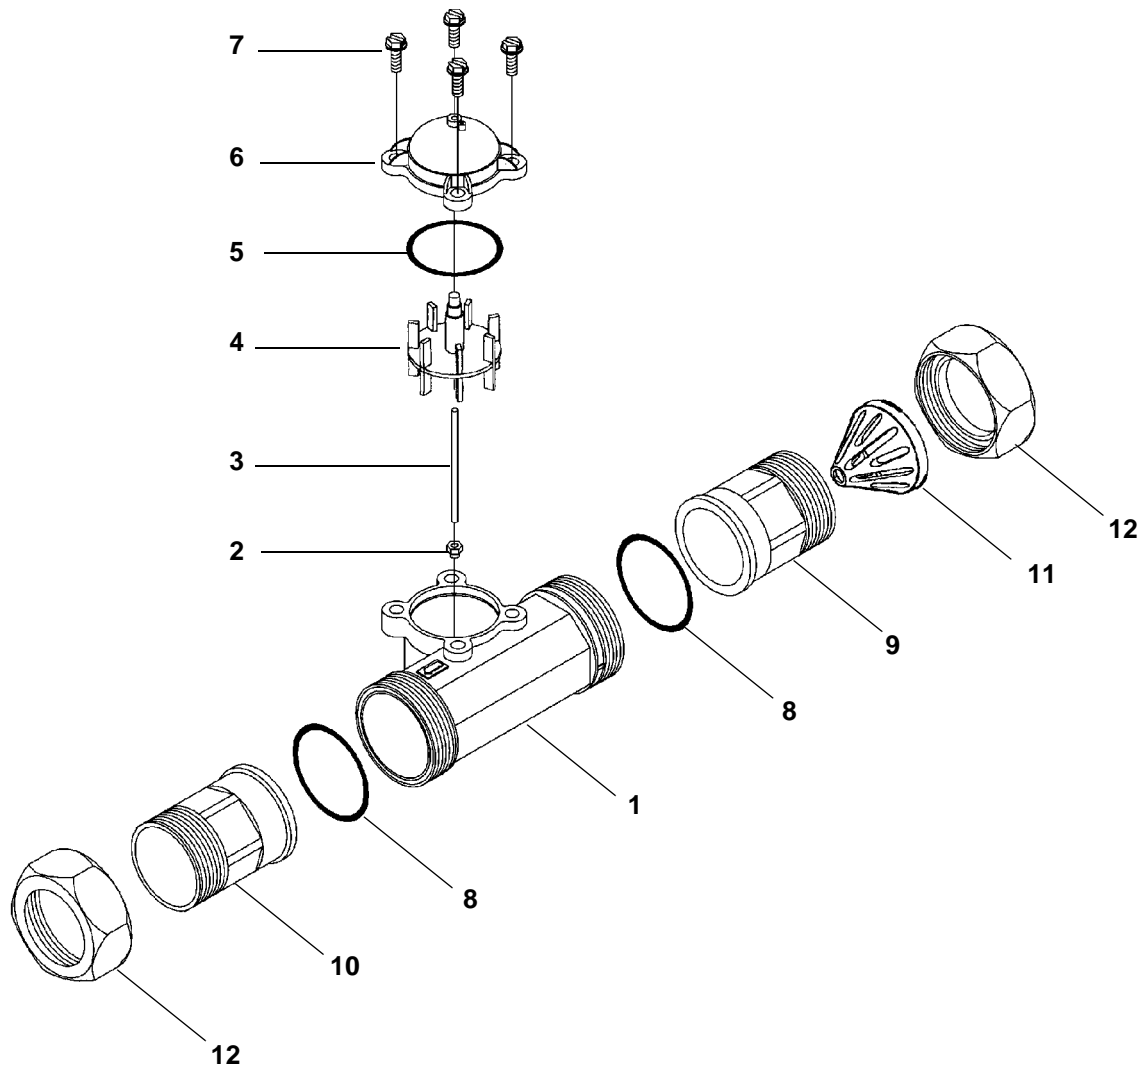


Item No.	Quantity	Part No.	Description
1	1	17689	Body, Meter, 2" Plastic
2	1	15532	Shaft, Impeller Seat
3	1	15432	Shaft, Impeller
4	1	15374	Impeller Assembly, 2" Meter
5	1	13847	O-Ring, -137, Meter
6	1	14038	Meter Cap Assembly (Standard Range)
	1	15150	Meter Cap Assembly (Extended Range)
7	4	12473	Screw, Hex Washer, 10-24 x 5/8
8	2	19485	O-Ring, -141, Meter
9A	1	17987-001	Fitting, Nipple, 2", Plastic, NPT, Machined
9B	1	17987-101	Fitting, Nipple, 2", Plastic, BSP, Machined
10A	1	17987-000	Fitting, Nipple, 2", Plastic, NPT
10B	1	17987-100	Fitting, Nipple, 2", Plastic, BSP
11	1	14680	Flow Straightener
12	2	17988	Nut, 2" Meter



# MODEL 3130

## 2" Meter Brass Assembly

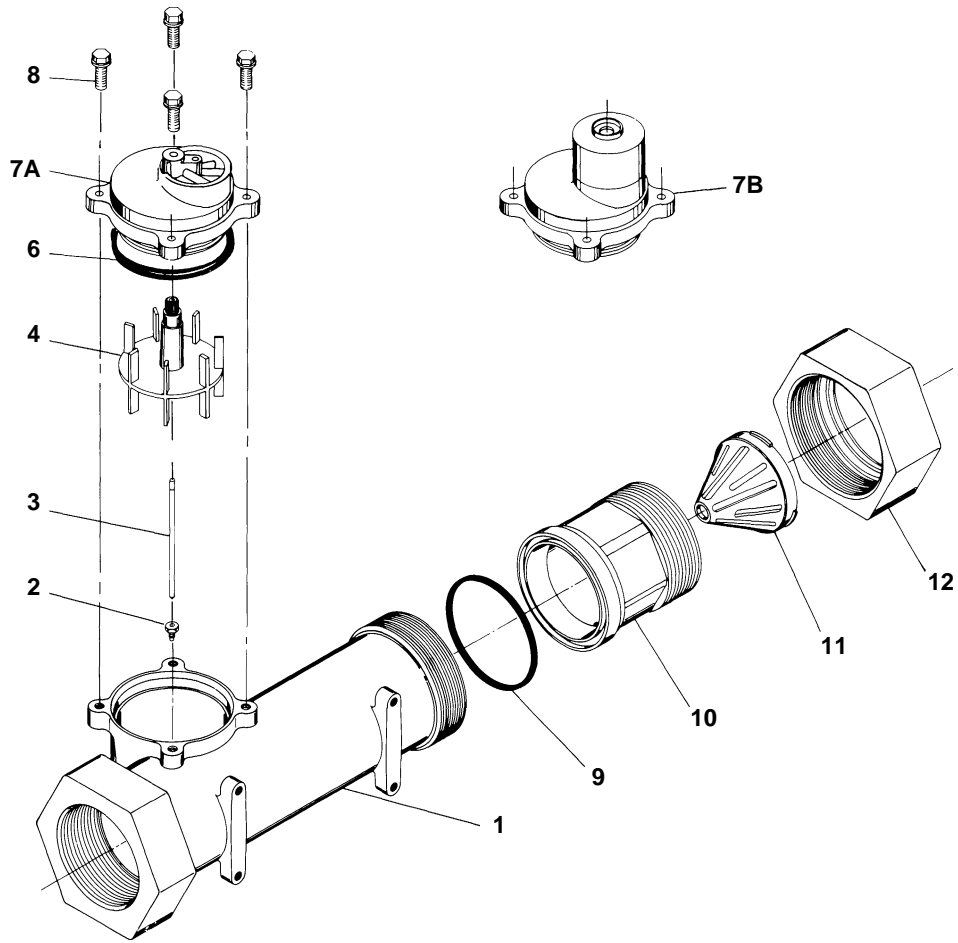


Item No.	Quantity	Part No.	Description
1	1	14456	Meter Body
2	1	15532	Impeller Shaft Retainer
3	1	15432	Impeller Shaft
4	1	15374	Impeller
6	1	13847	O-Ring - Meter Cover
7A	1	15218	Meter Cover Assembly (Standard)
7B	1	15237	Meter Cover Assembly (Extended Range)
8	4	12112	Screw - Meter Cover
9	1	14679	O-Ring - Quick Connect
10	1	14568	Nipple - Quick Connect
11	1	14680	Flow Straightener
12	1	14569	Nut - Quick Connect

# MODEL 3210 ECONOMINDER™

## Timer Assembly

(See opposite page for parts list)

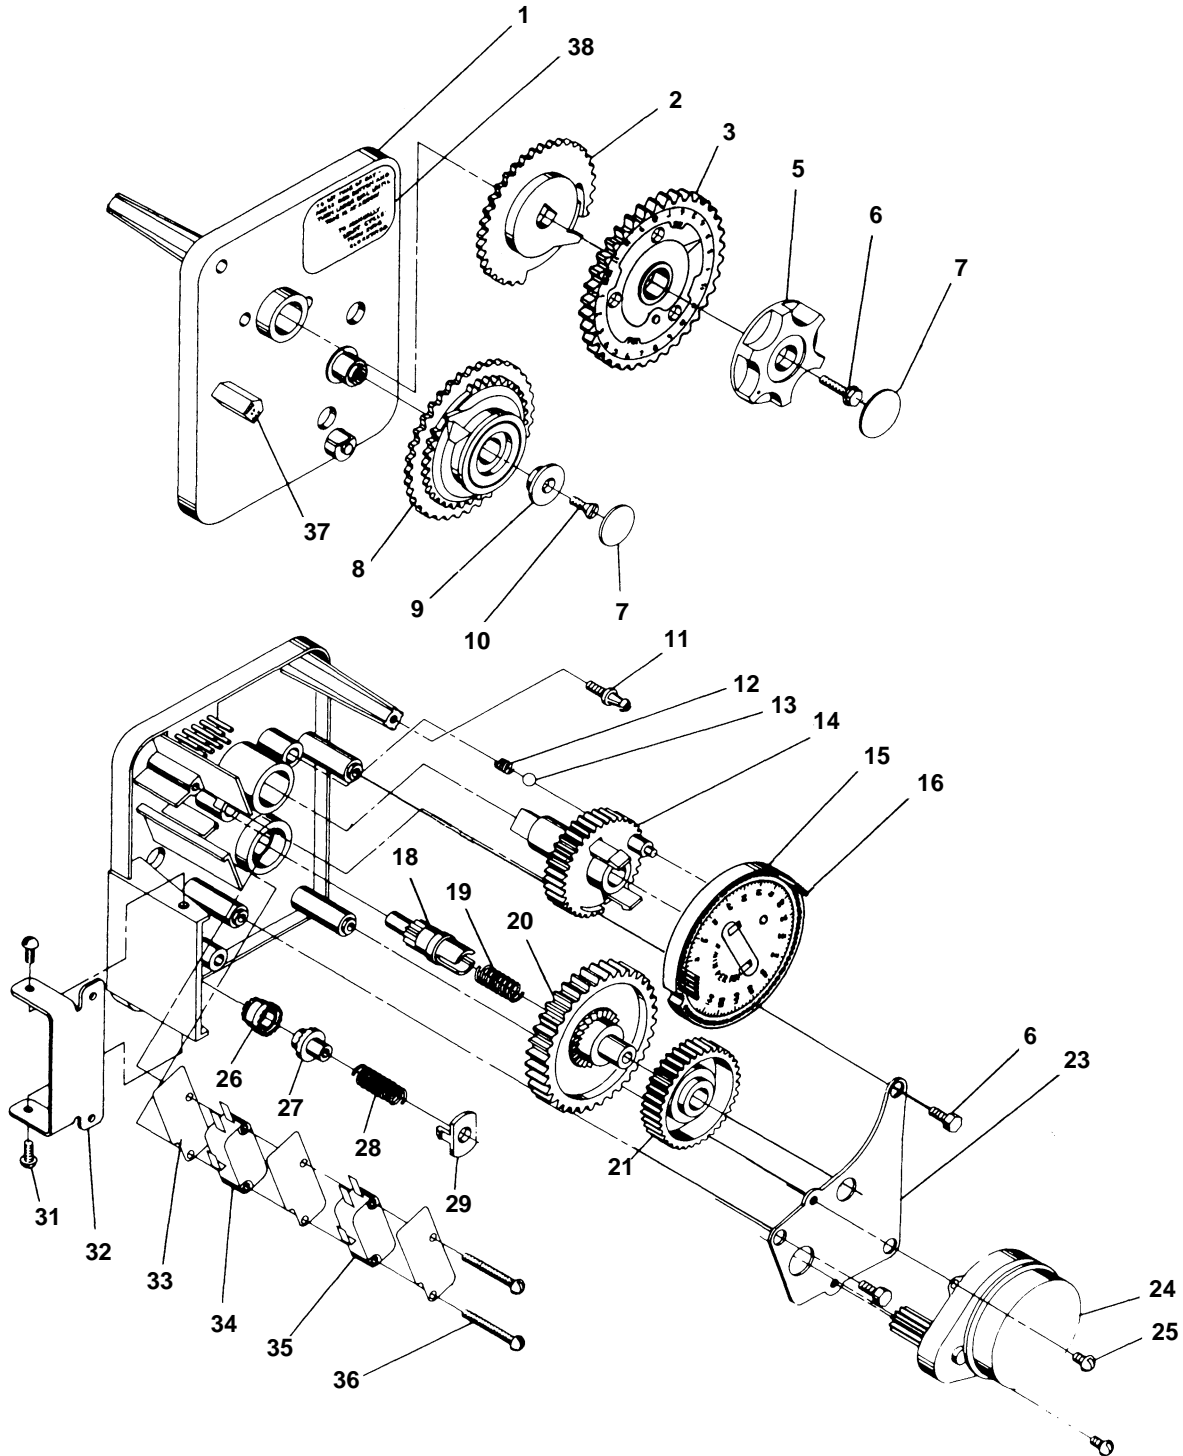

# MODEL 3210 ECONOMINDER™

## Timer Assembly

### Parts List

Item No.	Quantity	Part No.	Description
1	1	13870-01	Timer Housing Assembly
2	1	13802	Cycle Actuator Gear
3	1	40096-27	24 Hour Gear Assy, 12 Midnight
		40096-02	24 Hour Gear Assy, 2 AM
5	1	13886-01	Knob
6	4	13296	Screw - Timer Knob & Motor Plate Mtg.
7	2	11999	Button Decal
8	1	60405-50	Program Wheel Assembly, 21,000
9	1	13806	Program Wheel Retainer
10	1	13748	Screw - Program Wheel Mtg.
11	1	14265	Spring Clip
12	1	15424	Spring - Detent
13	1	15066	Ball - 1/4" Dia.
14	1	13911	Main Drive Gear
15	1	19210	Program Wheel
16	21	15493	Roll Pin
18	1	13018	Idler Shaft
19	1	13312	Spring - Idler
20	1	13017	Idler Gear
21	1	13164	Drive Gear
23	1	13887	Motor Mounting Plate
24	1	18743	Motor - 110V., 60 Hz.
		19659	Motor - 24V., 60 Hz.
25	2	13278	Screw - Motor Mounting
26	1	13830	Drive Pinion - Program Wheel
27	1	13831	Clutch - Drive Pinion
28	1	14276	Spring
29	1	14253	Spring Retainer
30			Not Assigned
31	3	11384	Screw - Timer Hinge & Ground Wire
32	1	13881	Hinge Bracket
33	3	14087	Insulator
34	1	10896	Switch
35	1	15320	Switch
36	2	11413	Screw - Switch Mounting
37	1	14007	Decal - Time of Day
38	1	14045	Decal - Instructions
39	1	13902	Harness - Not Shown
40	2	12681	Wire Connector - Not Shown
41	1	15354-01	Ground Wire - Not Shown
Not Shown	1	15465	Caution Label
Not Shown	1	14198	Capacity Label

# MODEL 3210 ECONOMINDER™

## Commercial Demand Regeneration Control

### Timer Settings

#### Typical Programming Procedure

Calculate the gallon capacity of the system, subtract the necessary reserve requirement and set the gallons required by lifting the gallon dial and rotating it so that the number of gallons required is aligned with the white dot on program wheel gear. Release and check for firm engagement with gear. Note, drawing shows 8,750 gallon setting. The capacity (gallons) arrow denotes remaining gallons exclusive of fixed reserve.

#### Note:

To set meter capacity at initial start-up, either:

1. Rotate manual regeneration knob one full revolution.  
— or —
2. Rotate program wheel manually clockwise or counter clockwise and align white dot with capacity arrow.

This procedure must be followed any time the program wheel setting is changed.

#### How To Set The Time Of Day:

Press and hold the red button in to disengage the 24 hour gear.

Turn the 24 hour gear until the actual time of day is at the time of day pointer.

Release the red button to again engage the 24 hour gear.

#### How To Manually Regenerate Your Water Conditioner At Any Time:

Turn the manual regeneration knob clockwise one "click."

This slight movement of the manual regeneration knob engages the program wheel and starts the regeneration program.


The black center knob will make one revolution in the following approximately three hours and stop in the position shown in the drawing.

Even though it takes three hours for this center knob to complete one revolution, the regeneration cycle of your unit might be set for only one half of this time.

In any event, conditioned water may be drawn after rinse water stops flowing from the water conditioner drain line.

#### Immediate Regeneration Timers:

These timers do not have a 24 hour gear. Setting the gallons on the program wheel and manual regeneration procedure are the same as previous instructions.

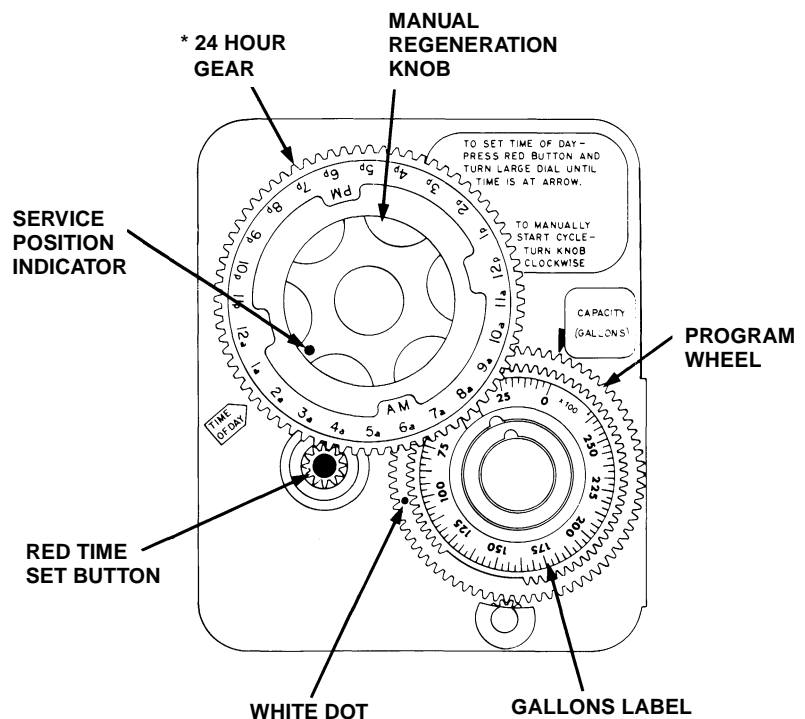

\* Immediate regeneration timers do not have 24 hour gear. No time of day can be set.

# MODEL 3200 TIMER

## Timer Setting Procedure

### How To Set Days On Which Water Conditioner Is To Regenerate:

Rotate the skipper wheel until the number "1" is at the red pointer. Set the days that regeneration is to occur by sliding tabs on the skipper wheel outward to expose trip fingers. Each tab is one day. Finger at red pointer is tonight. Moving clockwise from the red pointer, extend or retract fingers to obtain the desired regeneration schedule.

### How To Set The Time Of Day:

Press and hold the red button in to disengage the drive gear. Turn the large gear until the actual time of day is at the time of day pointer.

Release the red button to again engage the drive gear.

### How To Manually Regenerate Your Water Conditioner At Any Time:

Turn the manual regeneration knob clockwise.

This slight movement of the manual regeneration knob engages the program wheel and starts the regeneration program.



The black center knob will make one revolution in the following approximately three hours and stop in the position shown in the drawing.

Even though it takes three hours for this center knob to complete one revolution, the regeneration cycle of your unit might be set only one half of this time.

In any event, conditioned water may be drawn after rinse water stops flowing from the water conditioner drain line.

### How to Adjust Regeneration Time:

1. Disconnect the power source.
2. Locate the three screws behind the manual regeneration knob by pushing the red button in and rotating the 24 hour dial until each screw appears in the cut out portion of the manual regeneration knob.
3. Loosen each screw slightly to release the pressure on the time plate from the 24 hour gear.
4. Locate the regeneration time pointer on the inside of the 24 hour dial in the cut out.
5. Turn the time plate so the desired regeneration time aligns next to the raised arrow.
6. Push the red button in and rotate the 24 hour dial. Tighten each of the three screws.
7. Push the red button and locate the pointer one more time to ensure the desired regeneration time is correct.
8. Reset the time of day and restore power to the unit.

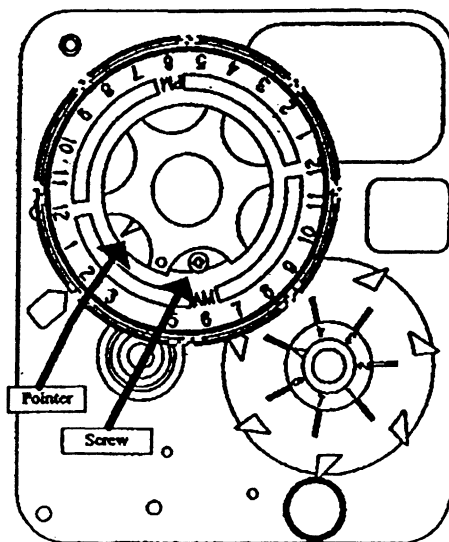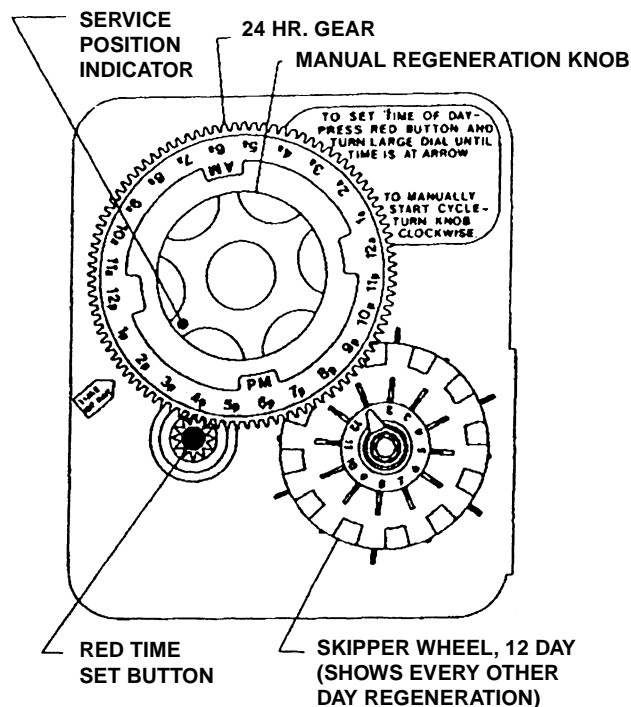

3200 ADJUSTABLE REGENERATION TIMER

### IMPORTANT!

**SALT LEVEL MUST ALWAYS BE ABOVE WATER LEVEL IN BRINE TANK**

# MODEL 3200 & 3210 TIMER SERIES

## Regeneration Cycle Program Setting Procedure

### How To Set Regeneration Cycle Program:

The regeneration cycle program on your water conditioner has been factory preset, however, portions of the cycle or program may be lengthened or shortened in time to suit local conditions.

### 3200 & 3210 Series Timers (Figure to Right)

To expose cycle program wheel, grasp timer in upper left-hand corner and pull, releasing snap retainer and swinging timer to the right.

To change the regeneration cycle program, the program wheel must be removed. Grasp program wheel and squeeze protruding lugs toward center, lift program wheel off timer. (Switch arms may require movement to facilitate removal.)

Return timer to closed position engaging snap retainer in back plate. Make certain all electrical wires locate above snap retainer post.

### Timer Setting Procedure for 3200 & 3210 Timer

#### How To Change The Length Of The Backwash Time:

The program wheel as shown in the drawing is in the service position. As you look at the numbered side of the program wheel, the group of pins starting at zero determines the length of time your unit will backwash.

FOR EXAMPLE: If there are six pins in this section, the time of backwash will be 12 min. (2 min. per pin). To change the length of backwash time, add or remove pins as required. The number of pins times two equal the backwash time in minutes.


#### How To Change The Length Of Brine And Rinse Time:

The group of holes between the last pin in the backwash section and the second group of pins determines the length of time that your unit will brine and rinse (2 min. per hole).

To change the length of brine and rinse time, move the rapid rinse group of pins to give more or fewer holes in the brine and rinse section. Number of holes times two equals brine and rinse time in minutes.

#### How To Change The Length Of Rapid Rinse:

The second group of pins on the program wheel determines the length of time that your water conditioner will rapid rinse (2 min. per pin).

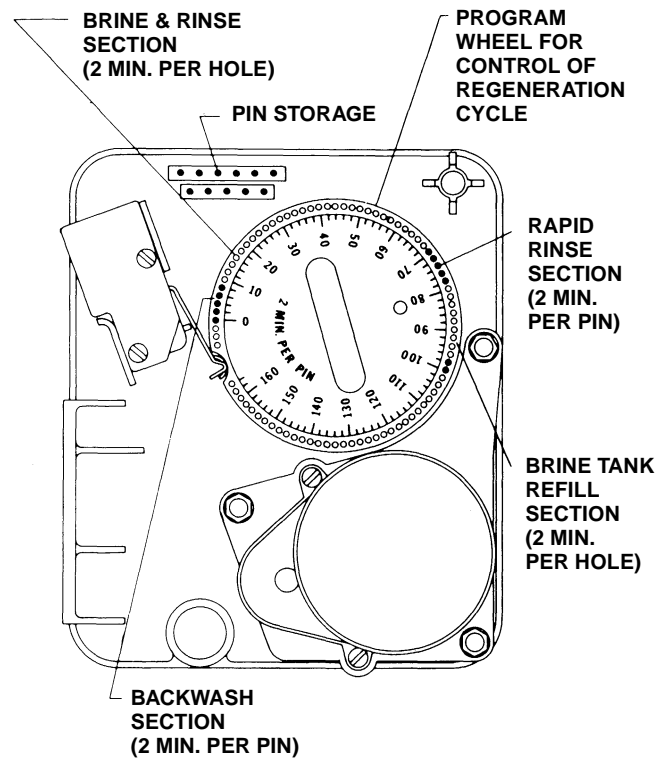

To change the length of rapid rinse time, add or remove pins at the higher numbered end of this section as required. The number of pins times two equals the rapid rinse time in minutes.

#### How To Change The Length Of Brine Tank Refill Time:

The second group of holes in the program wheel determines the length of time that your water conditioner will refill the brine tank (2 min. per hole).

To change the length of refill time, move the two pins at the end of the second group of holes as required.

The regeneration cycle is complete when the outer microswitch is tripped by the two pin set at end of the brine tank refill section. The program wheel, however, will continue to rotate until the inner microswitch drops into the notch on the program wheel.

# MODEL 3130

## Service Instructions

PROBLEM	CAUSE	CORRECTION
1. Softener fails to regenerate.	A. Electrical service to unit has been interrupted. B. Timer is defective. C. Power failure.	A. Assure permanent electrical service (check fuse, plug, pull chain or switch). B. Replace timer. C. Reset time of day.
2. Hard water.	A. By-pass valve is open. B. No salt in brine tank. C. Insufficient water flowing into brine tank. D. Hot water tank hardness. E. Leak at distributor tube. F. Internal valve leak.	A. Close by-pass valve. B. Add Salt to brine tank and maintain salt level above water level. C. Check brine tank fill time and clean brine line flow control if plugged. D. Repeated flushing of the hot water tank is required. E. Make sure distributor tube is not cracked. Check O-ring and tube pilot. F. Replace seals and spacers and/or piston.
3. Unit used too much salt.	A. Improper salt setting. B. Excessive water in brine tank.	A. Check salt usage and salt setting. B. See Problem No. 7.
4. Loss of water pressure.	A. Iron buildup in line to water conditioner. B. Iron buildup in water conditioner. C. Inlet of control plugged due to foreign material broken loose from pipe by recent work done on plumbing system.	A. Clean line to water conditioner. B. Clean control and add mineral cleaner to mineral bed. Increase frequency of regeneration. C. Remove pistons and clean control.
5. Loss of mineral through drain line.	A. Air in water system. B. Improperly sized drain line flow control.	A. Assure that well system has proper air eliminator control. Check for dry well condition. B. Check for proper drain rate.
6. Iron in conditioned water.	A. Fouled mineral bed.	A. Check backwash, brine draw and brine tank fill. Increase frequency of regeneration. Increase backwash time.

# MODEL 3130

## Service Instructions (Cont'd.)

PROBLEM	CAUSE	CORRECTION
7. Excessive water in brine tank.	A. Plugged drain line flow control. B. Plugged injector system. C. Timer not cycling. D. Foreign material in brine valve. E. Foreign material in brine line flow control.	A. Check flow control. B. Clean injector and screen. C. Replace timer. D. Replace brine valve seat and clean valve. E. Clean brine line flow control.
8. Softener fails to draw brine.	A. Drain line flow control is plugged. B. Injector is plugged. C. Line pressure is too low. D. Internal Control Leak.	A. Clean drain line flow control. B. Clean injector. C. Increase line pressure to 25 P.S.I. min. D. Check drive motor and switches.
9. Control cycles continuously.	A. Misadjusted, broken or shorted switch.	A. Determine if switch or timer is faulty and replace it, or replace complete power head.
10. Drain flows continuously.	A. Valve is not programming correctly. B. Foreign material in control. C. Internal control leak	A. Check timer program and positioning of control. Replace power head assembly if not positioning properly. B. Remove power head assembly and inspect bore, remove foreign material and check control in various regeneration positions. C. Replace seals and piston assembly.

### General Service Hints

#### **Problem: Softener Delivers Hard Water.**

Cause could be that . . . Reserve Capacity Has Been Exceeded.

**Correction:** Check salt dosage requirements and reset program wheel to provide additional reserve.

Cause could be that . . . Program Wheel Is Not Rotating With Meter Output.

**Correction:** Pull cable out of meter cover and rotate manually. Program wheel must move without binding and clutch must give positive "clicks" when program wheel strikes regeneration stop. If it does not, replace timer.

Cause could be that . . . Meter Is Not Measuring Flow.


**Correction:** Check meter with meter checker.



# SYSTEM #4

## Single Meter System Wiring Diagram

### Immediate or Delayed Regeneration

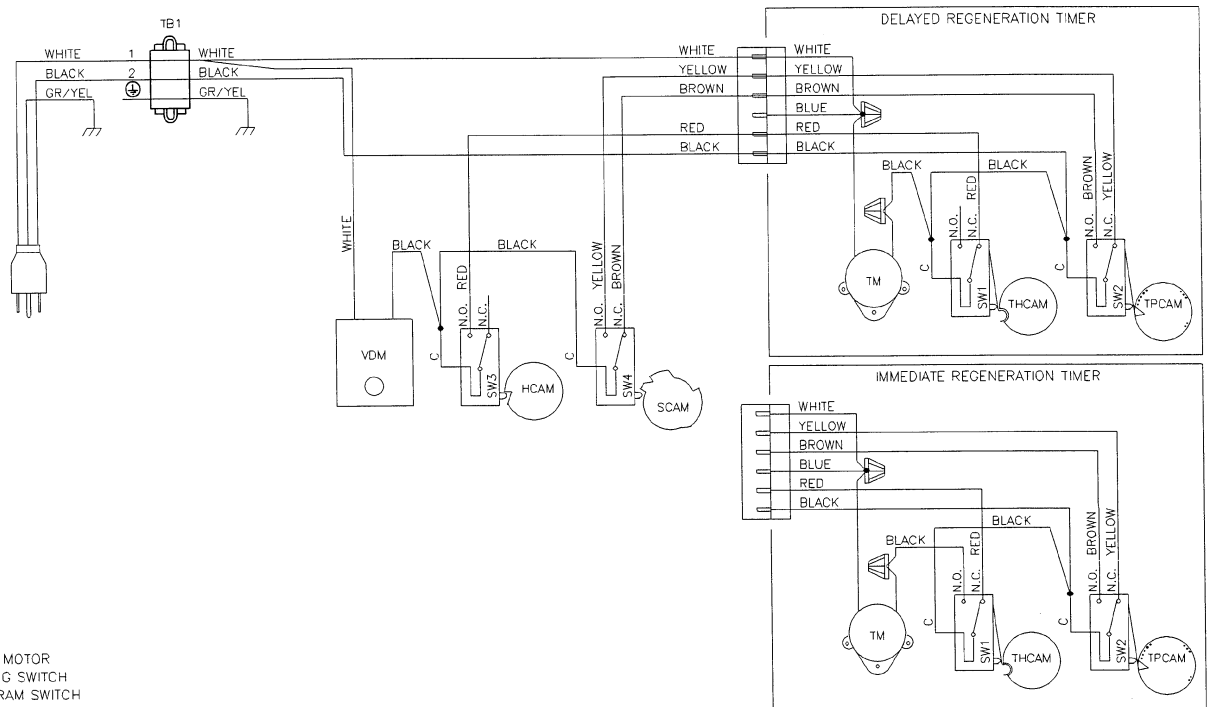


- TM – TIMER MOTOR
- VDM – VALVE DRIVE MOTOR
- SW1 – TIMER HOMING SWITCH
- SW2 – TIMER PROGRAM SWITCH
- SW3 – VALVE HOMING SWITCH
- SW4 – VALVE STEP SWITCH
- THCAM – TIMER HOMING CAM
- TPCAM – TIMER PROGRAM CAM
- HCAM – VALVE HOMING CAM
- SCAM – VALVE STEP CAM

NOTE:  
SINGLE TANK TIMECLOCK, METER DELAYED, OR METER IMMEDIATE REGENERATION

# SYSTEM #4 WITH REMOTE METER


## Single Meter System Wiring Diagram

### Immediate or Delayed Regeneration

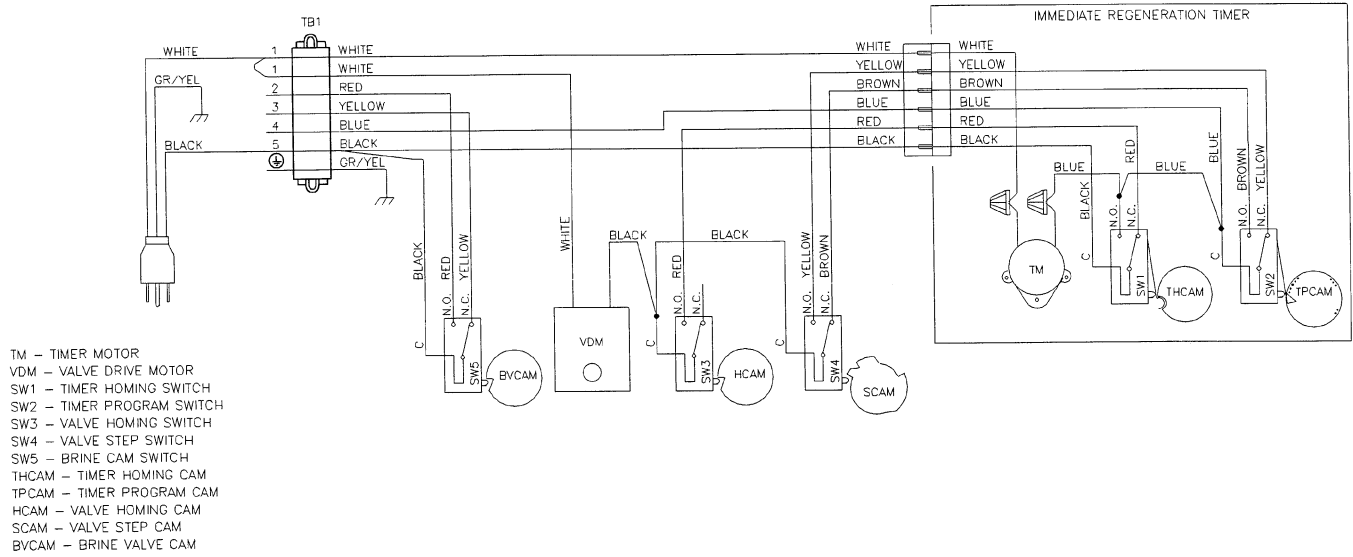


NOTE:  
 SINGLE TANK REMOTE METER INITIATED DELAYED, OR IMMEDIATE REGENERATION

#### REMOTE METER WIRING

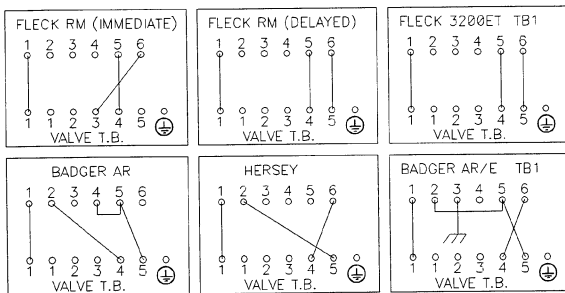


# SYSTEM #5

## 2 Meter Interlock Wiring Diagram

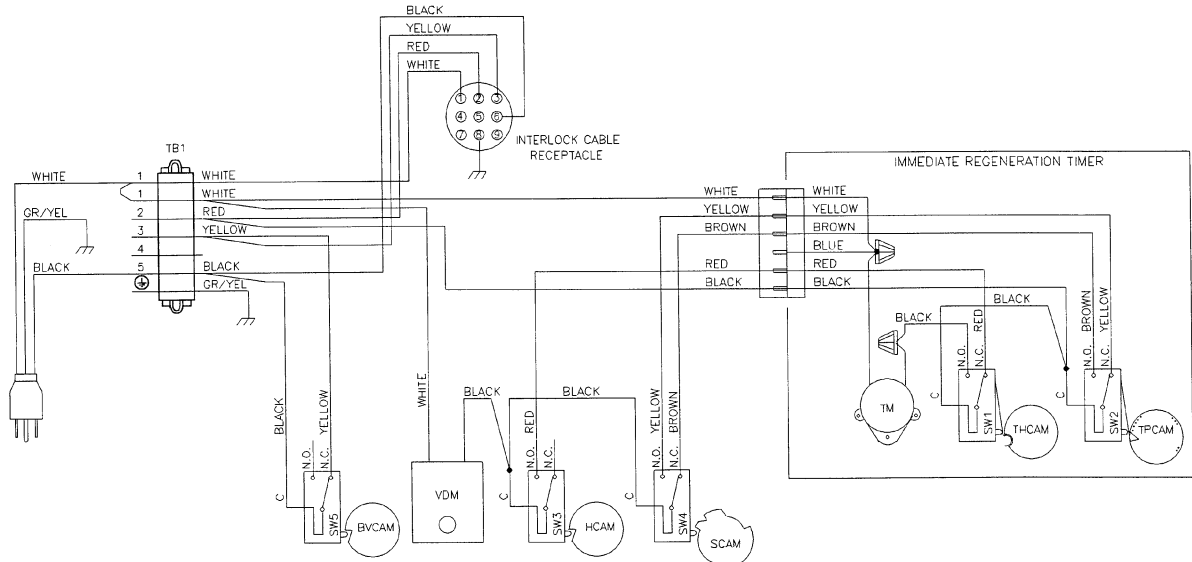

- TM – TIMER MOTOR
- VDM – VALVE DRIVE MOTOR
- SW1 – TIMER HOMING SWITCH
- SW2 – TIMER PROGRAM SWITCH
- SW3 – VALVE HOMING SWITCH
- SW4 – VALVE STEP SWITCH
- SW5 – BRINE CAM SWITCH
- THCAM – TIMER HOMING CAM
- TPCAM – TIMER PROGRAM CAM
- HCAM – VALVE HOMING CAM
- SCAM – VALVE STEP CAM
- BVCAM – BRINE VALVE CAM


NOTE:  
TWO TANK INTERLOCKED INDIVIDUAL METER IMMEDIATE REGENERATION.  
ONLY ONE TANK IN REGENERATION THE OTHER IN SERVICE.

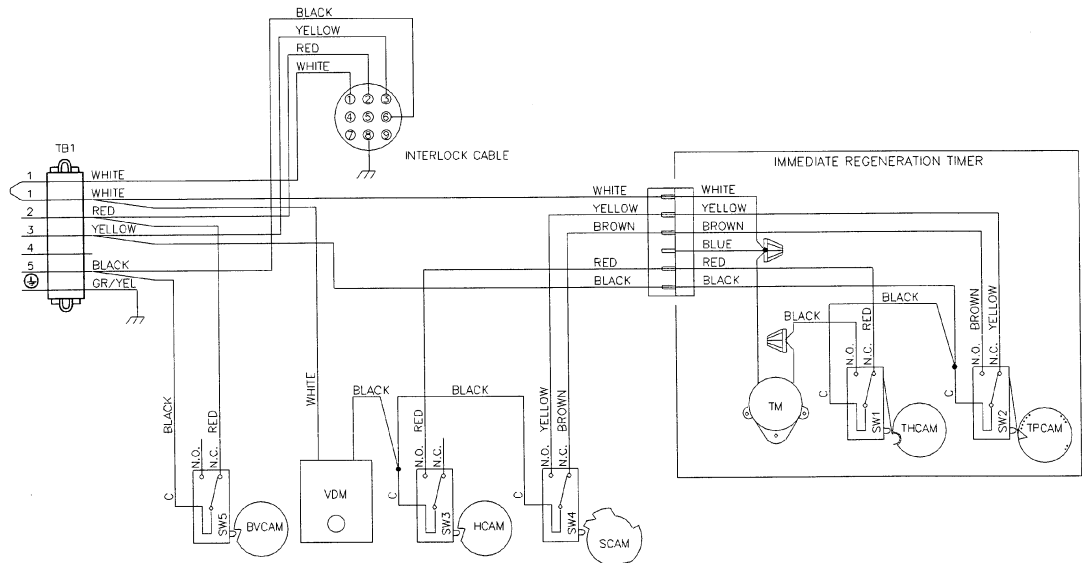

- TM – TIMER MOTOR
- VDM – VALVE DRIVE MOTOR
- SW1 – TIMER HOMING SWITCH
- SW2 – TIMER PROGRAM SWITCH
- SW3 – VALVE HOMING SWITCH
- SW4 – VALVE STEP SWITCH
- SW5 – BRINE CAM SWITCH
- THCAM – TIMER HOMING CAM
- TPCAM – TIMER PROGRAM CAM
- HCAM – VALVE HOMING CAM
- SCAM – VALVE STEP CAM
- BVCAM – BRINE VALVE CAM

# SYSTEM #6



## Series Regeneration Wiring Diagram

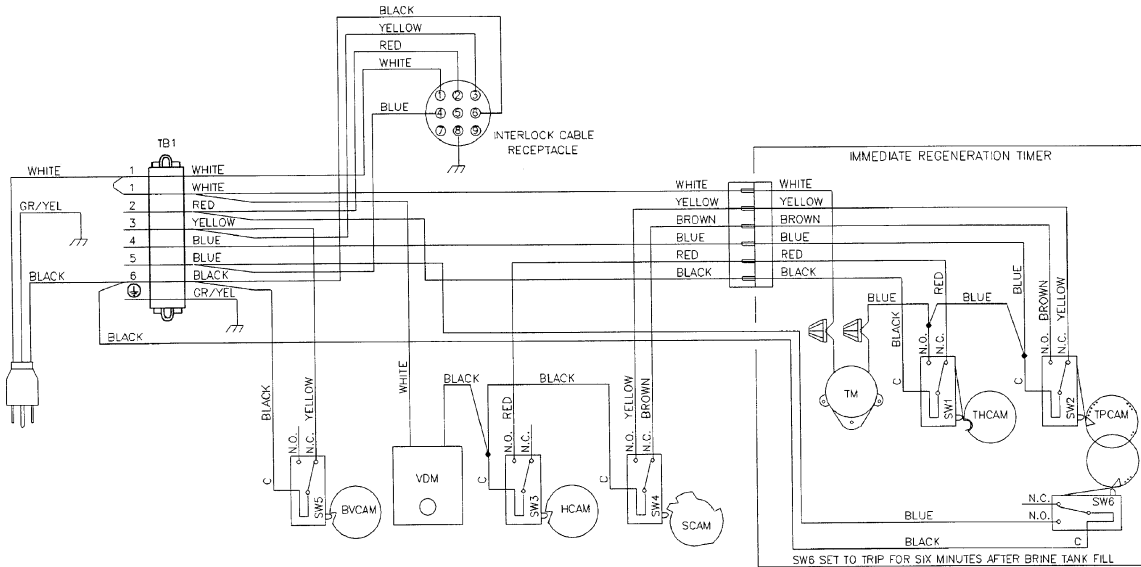

- TM - TIMER MOTOR
- VDM - VALVE DRIVE MOTOR
- SW1 - TIMER HOMING SWITCH
- SW2 - TIMER PROGRAM SWITCH
- SW3 - VALVE HOMING SWITCH
- SW4 - VALVE STEP SWITCH
- SW5 - BRINE CAM SWITCH
- THCAM - TIMER HOMING CAM
- TPCAM - TIMER PROGRAM CAM
- HCAM - VALVE HOMING CAM
- SCAM - VALVE STEP CAM
- BVCAM - BRINE VALVE CAM

NOTE:  
TWO TANK INTERLOCKED SINGLE REMOTE METER SERIES REGENERATION.  
ONLY ONE TANK IN REGENERATION THE OTHER IN SERVICE.  
LEAD VALVE REGENERATES FIRST, FOLLOWED IMMEDIATELY BY LAG VALVE.


### REMOTE METER WIRING

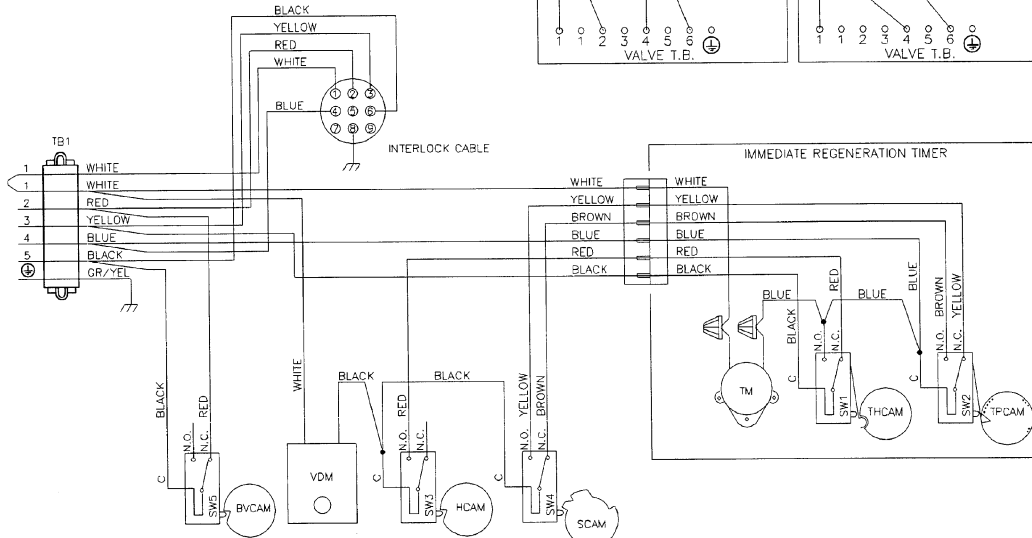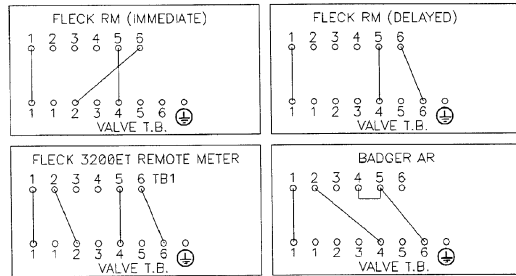




- TM - TIMER MOTOR
- VDM - VALVE DRIVE MOTOR
- SW1 - TIMER HOMING SWITCH
- SW2 - TIMER PROGRAM SWITCH
- SW3 - VALVE HOMING SWITCH
- SW4 - VALVE STEP SWITCH
- SW5 - BRINE CAM SWITCH
- THCAM - TIMER HOMING CAM
- TPCAM - TIMER PROGRAM CAM
- HCAM - VALVE HOMING CAM
- SCAM - VALVE STEP CAM
- BVCAM - BRINE VALVE CAM

# SYSTEM #7


## 24V/120V - Alternator Wiring Diagram

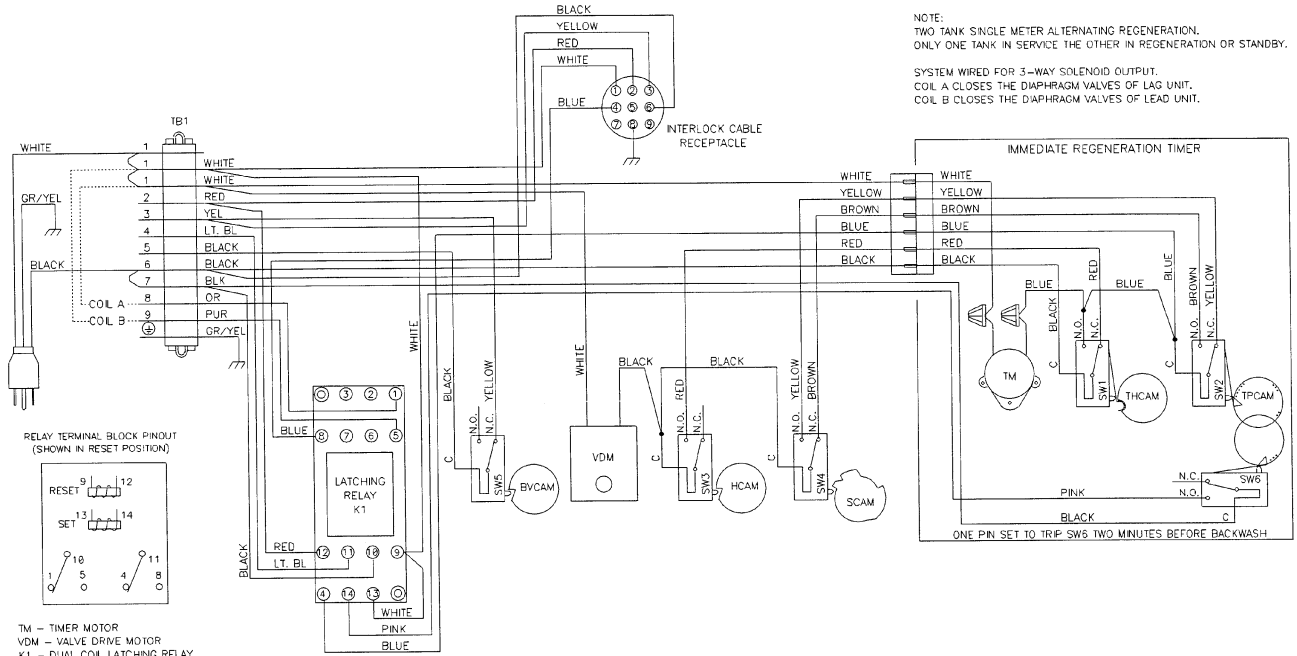

### REMOTE METER WIRING

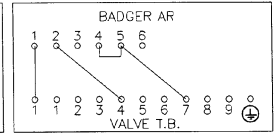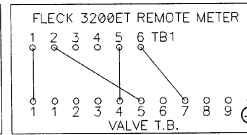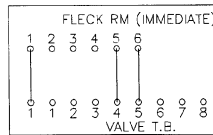


- TM - TIMER MOTOR  
VDM - VALVE DRIVE MOTOR  
SW1 - TIMER HOMING SWITCH  
SW2 - TIMER PROGRAM SWITCH  
SW3 - VALVE HOMING SWITCH  
SW4 - VALVE STEP SWITCH  
SW5 - BRINE CAM SWITCH  
SW6 - TIMER AUXILIARY SWITCH  
THCAM - TIMER HOMING CAM  
TPCAM - TIMER PROGRAM CAM  
HCAM - VALVE HOMING CAM  
SCAM - VALVE STEP CAM  
BVCAM - BRINE VALVE CAM


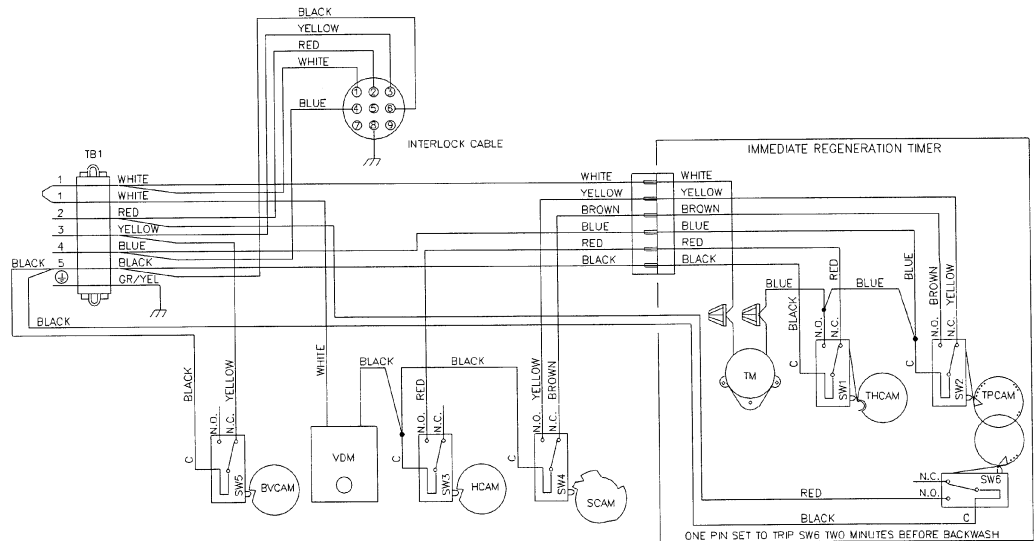


# SYSTEM #7

## 230V - Alternator Wiring Diagram

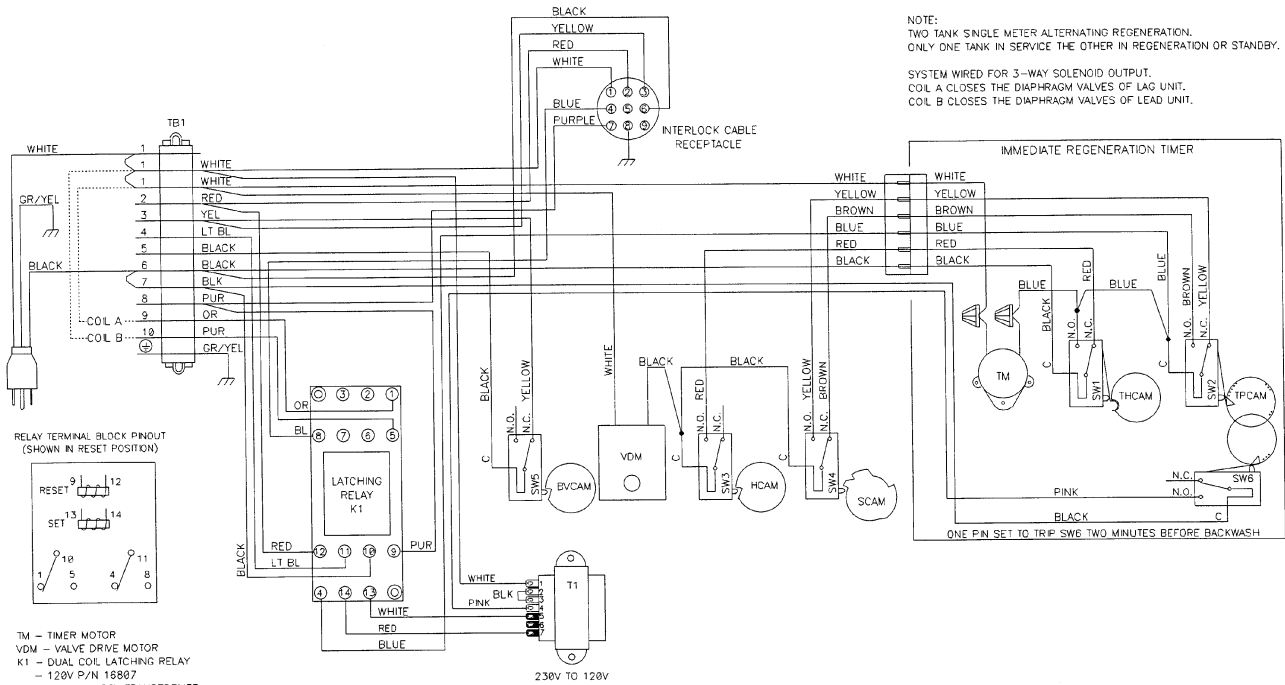


### REMOTE METER WIRING

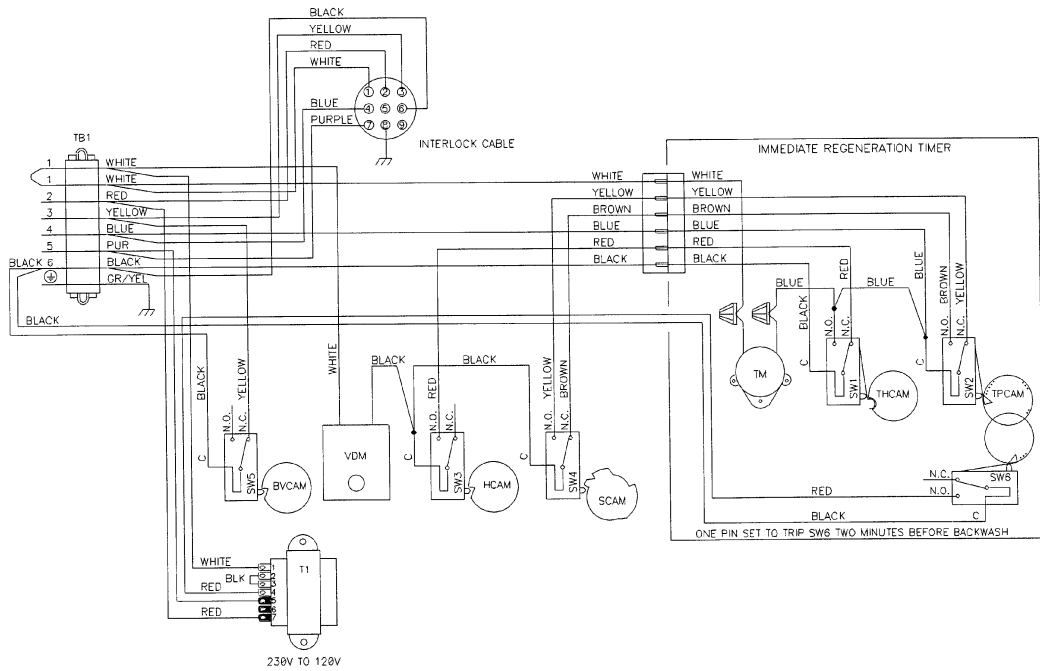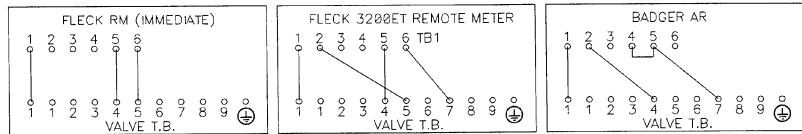


# MODEL 3130

## System #4 - Typical Single Tank Installation With Optional Meter

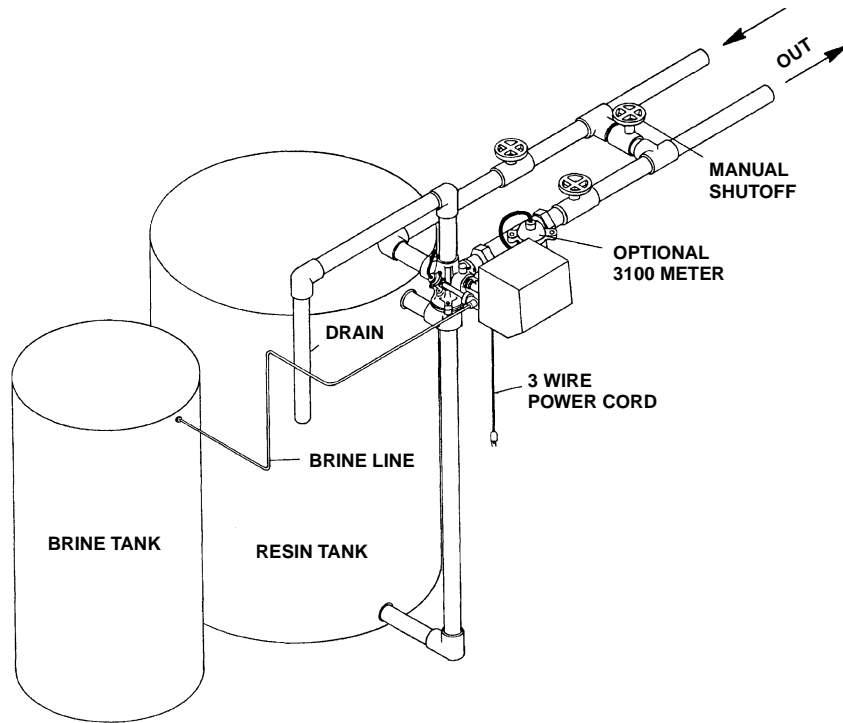


## System #5 Interlock - Typical Twin Tank Installation with Optional Meter Interlock and No Hard Water Bypass

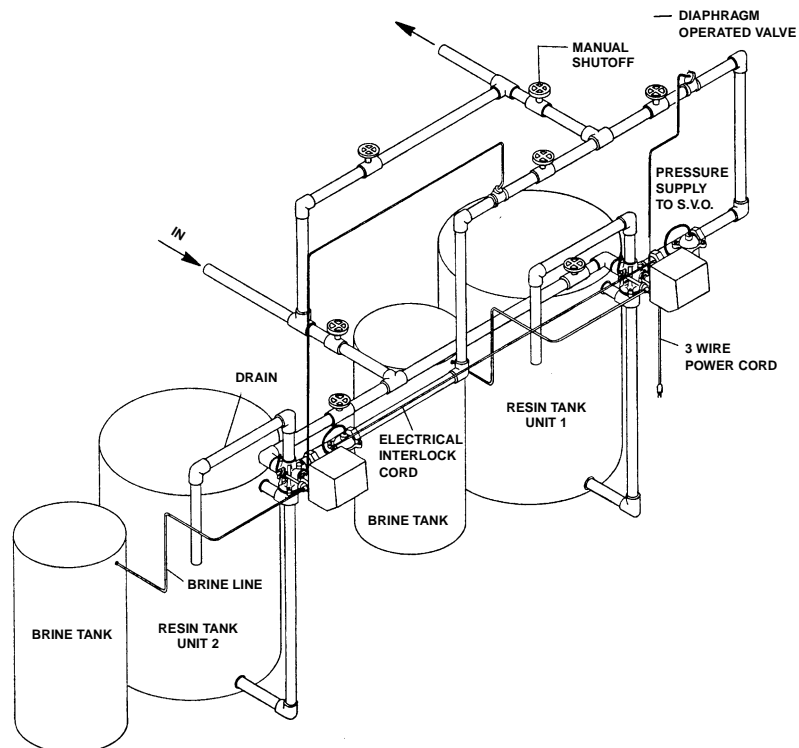


# MODEL 3130

## System #6 - Twin Series Regeneration Installation with a Remote Meter

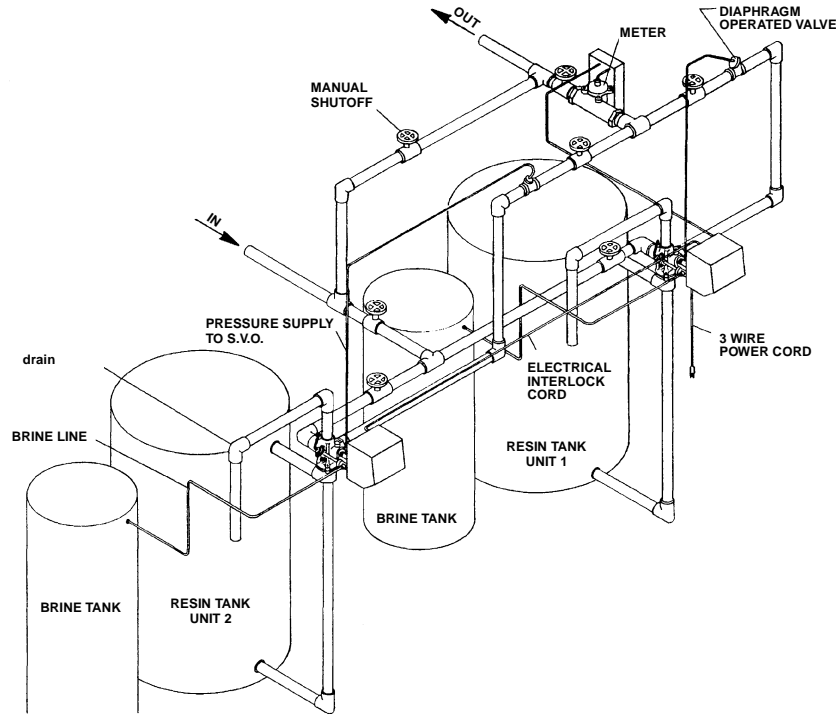


## System #7 - Twin Alternator Installation with a Remote Meter

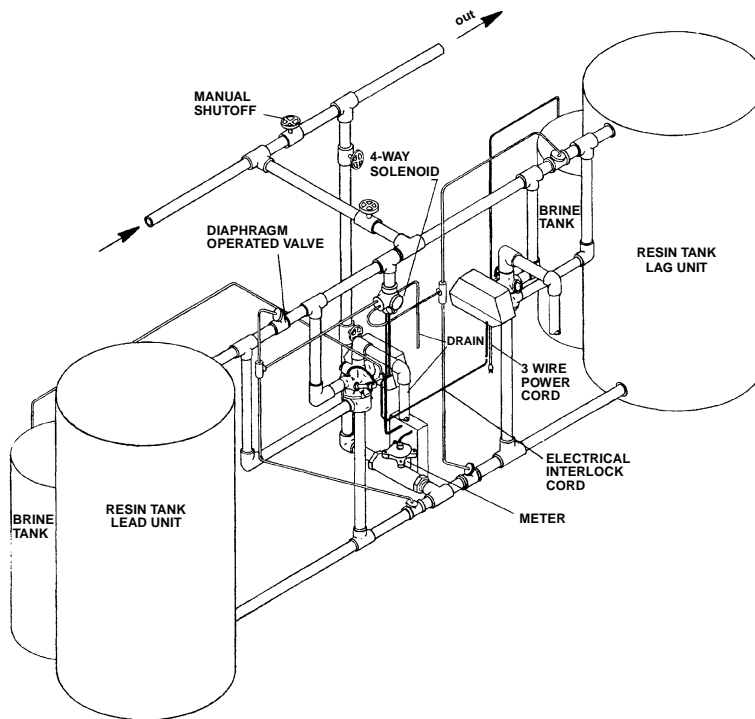



# MODEL 3130


## 3130 Outline Drawing

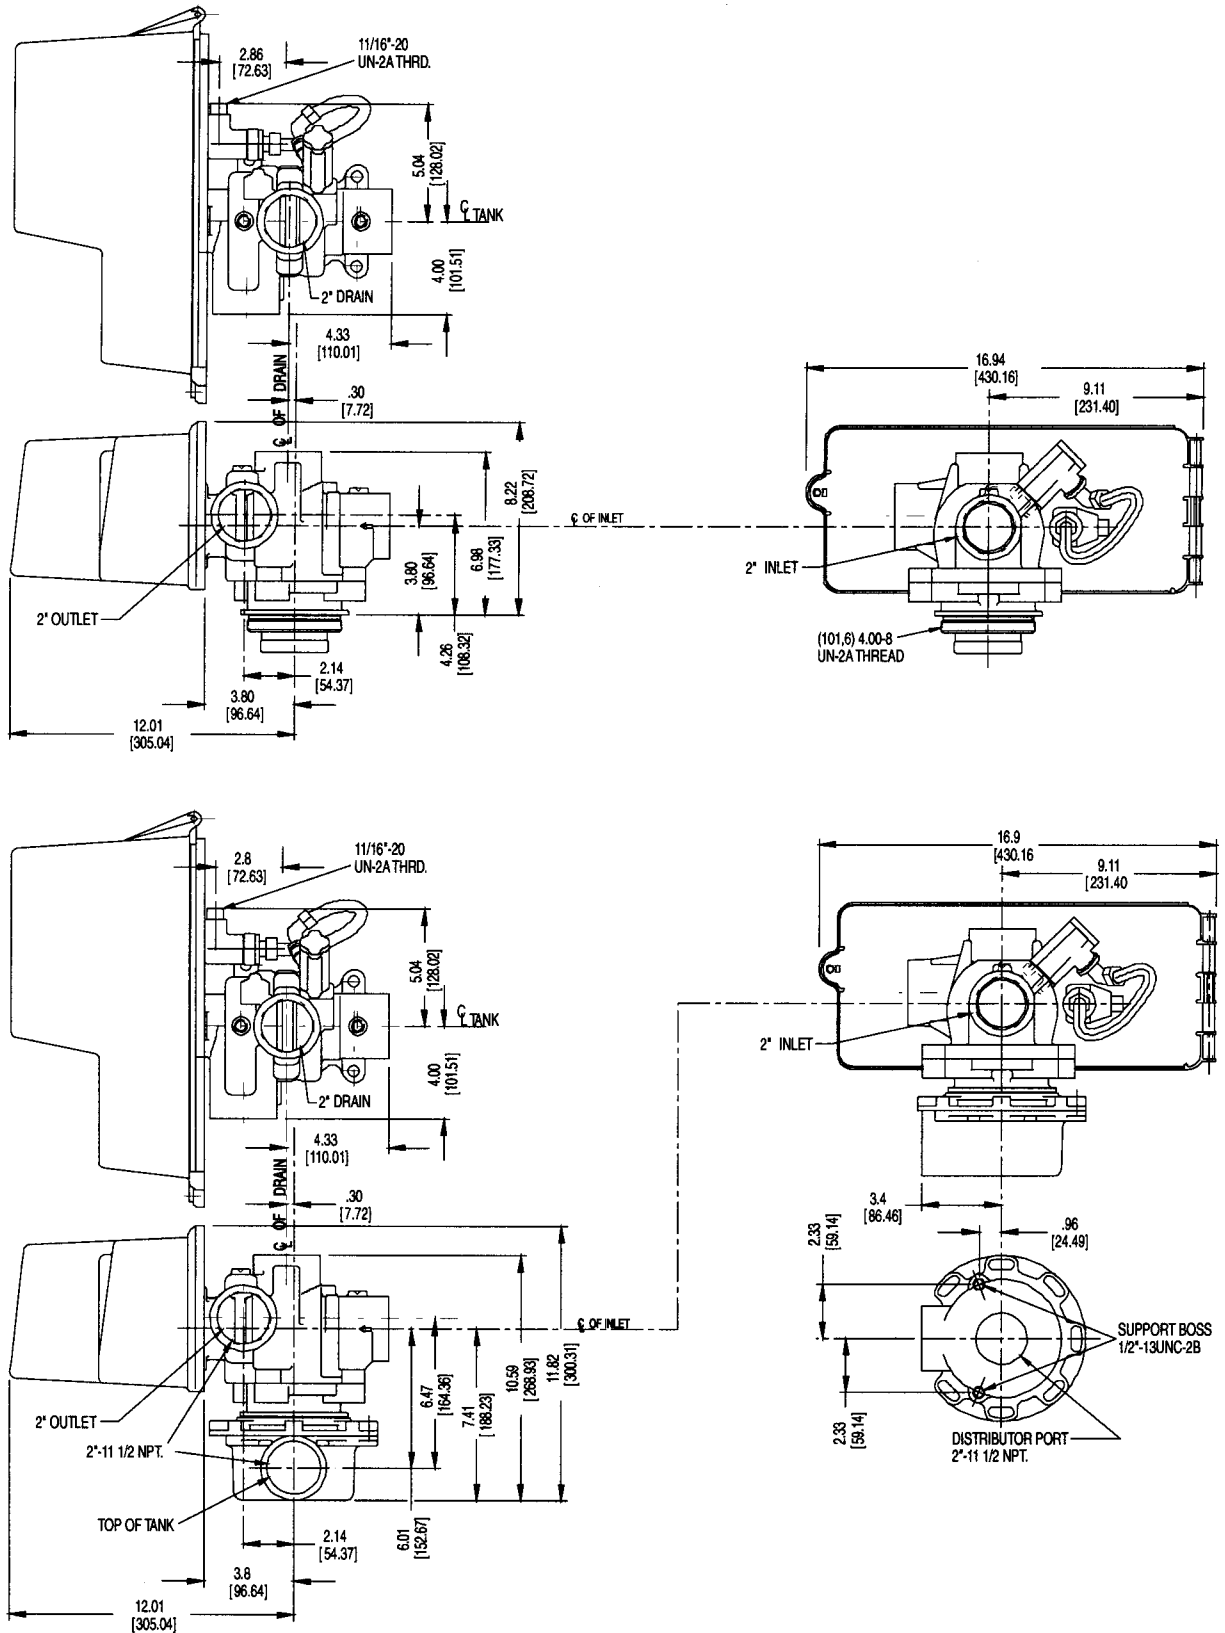



# MODEL 3130 Downflow

## Flow Data & Injector Draw Rates

### SERVICE, BACKWASH, RAPID RINSE, BYPASS

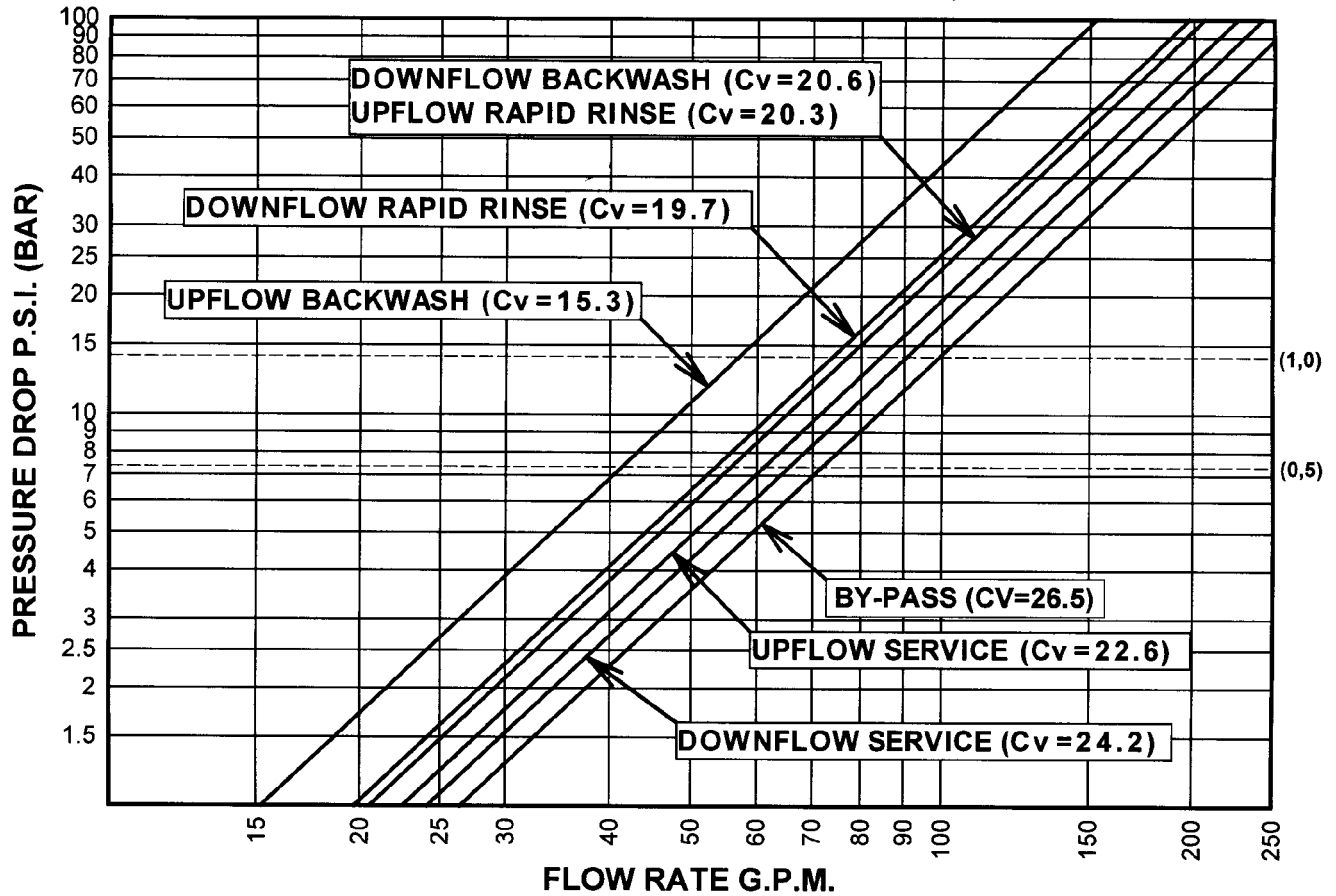

Confidential Property of Fleck Controls

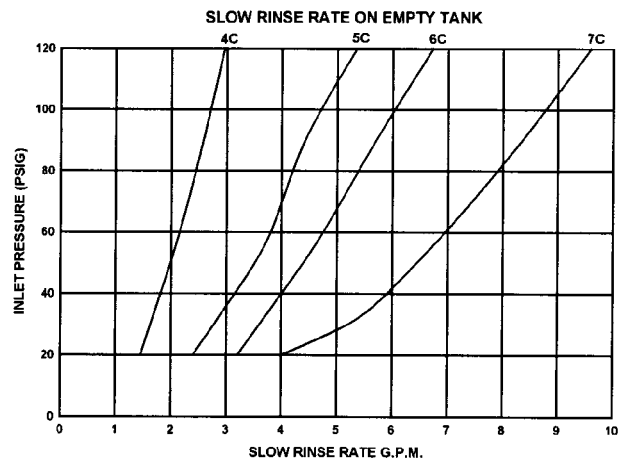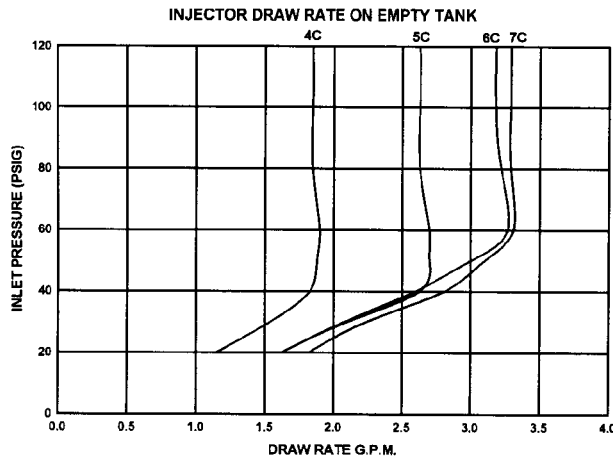

# MODEL 3130

## Service Assemblies

### 60034-790 1705 Brine Valve

For Illustration, See Page 20

- 1..... 10250..... Brine Valve Spring Clip
- 1..... 12550..... Quad Ring
- 1..... 13201..... Quad Ring
- 1..... 14785-01..... Flow Control Retainer
- 1..... 14790..... Brine Valve Body
- 1..... 14792..... Brine Valve End Plug
- 1..... 14795..... Brine Valve Piston
- 1..... 40199..... Brine Valve Stem
- 1..... 14798..... Spacer
- 2..... 14811..... Piston Seal
- 1..... 15310..... Brine Valve Spring
- 1..... 40213..... Stem Guide
- 1..... 16123..... Nut 1/2"
- 1..... 16124..... Ferrule 1/2"

### 60843-OXC 1705 Injector Assembly

For Illustration, See Page 20

- 1..... 10228..... Injector Cap
- 1..... 10229..... Injector Cover Gasket
- 1..... 17777-03..... Injector Body
- 1..... 14801-x..... Injector Nozzle
- 1..... 14802-x..... Injector Throat
- 1..... 13771..... O-Ring
- 2..... 14804..... Screw
- 1..... 19925..... Injector Body Gasket

### 60116 3130 Piston Assembly

For Illustration, See Page 16

- 1..... 14296..... Quad Ring, -012
- 1..... 14922..... O-Ring, -035
- 1..... 14754-01..... End Plug
- 1..... 14818..... Clip, Piston Rod
- 1..... 40203..... Spacer, Endplug
- 1..... 16130..... Piston
- 1..... 40205..... Piston Rod, 2930/3130

### 60117 3130 Piston Assembly, No Hard Water By-Pass

For Illustration, See Page 16

- 1..... 16130..... Piston, No Hard Water By-Pass
- 1..... 14754-11..... End Plug, 2930  
..... No Hard Water By-Pass
- 1..... 40205-01..... Piston Rod, NHWBP
- 1..... 14818..... Ring, Piston Rod Snap
- 1..... 14922..... O-Ring, -035
- 1..... 14926..... Quad Ring, -012
- 1..... 40203..... Spacer, End Plug
- 1..... 19611-12..... Piston, HNWBP

### 60131 2930/3130/3150 Upper Seal and Spacer Kit

For Illustration, See Page 16

- 8..... 11720..... Seal, Piston
- 2..... 10368..... Spacer
- 5..... 10369..... End Spacer, Noryl

### 60050-91 Drive Motor Assembly, 24V, STF

#### -92 Drive Motor Assembly, 115V, STF

#### -93 Drive Motor Assembly, 230V, STF

For Illustration, See Page 18

- 3..... 10218..... MicroSwitch
- 2..... 14923..... Screw #4 x 1 1/13
- 3..... 10302..... Insulator
- 2..... 10338..... Roll Pin 3/22 x 7/8
- 1..... 40190 -1156.... Drive Motor 110V 50/60 Hz
- ..... -245 Drive Motor 24V 50/60 Hz
- ..... -2305 Drive Motor 230V 50/60 Hz
- 1..... 40202..... Motor Bracket - Drive Side
- 5..... 10872..... Screw #8 x 5/16
- 1..... 16430..... Wire Harness
- 1..... 40175-01..... Motor Lead Wire
- 1..... 40201..... Motor Bracket BN Side
- 1..... 40198..... Drive Cam - STF
- 1..... 12777-02..... Brine Valve Cam
- 1..... 14784..... Drive Bearing
- 1..... 10250..... Retaining Ring
- 1..... 40197..... Connecting Link
- 1..... 40349..... Screw, Brine Deflection
- 1..... 40193..... Screw, Ground
- 2..... 11805..... Screw, Micro Switch Brine

### 60393 2" Brass Meter Assembly - Std. Range

### 60394 2" Brass Meter Assembly - Ext. Range

For Parts Breakdown, See Page 25

### 60620 2" Plastic Meter Assembly - Std. Range

### 60621 2" Plastic Meter Assembly - Ext. Range

For Parts Breakdown, See Page 24

#### Side Mount Adapter

- 61414..... NPT/US
- 61414NP..... NPT/US/NICKEL
- 61414-20..... BSP/METRIC
- 61414-20NP..... BSP/METRIC/NICKEL









